

1965 RAMBLER AMERICAN 6

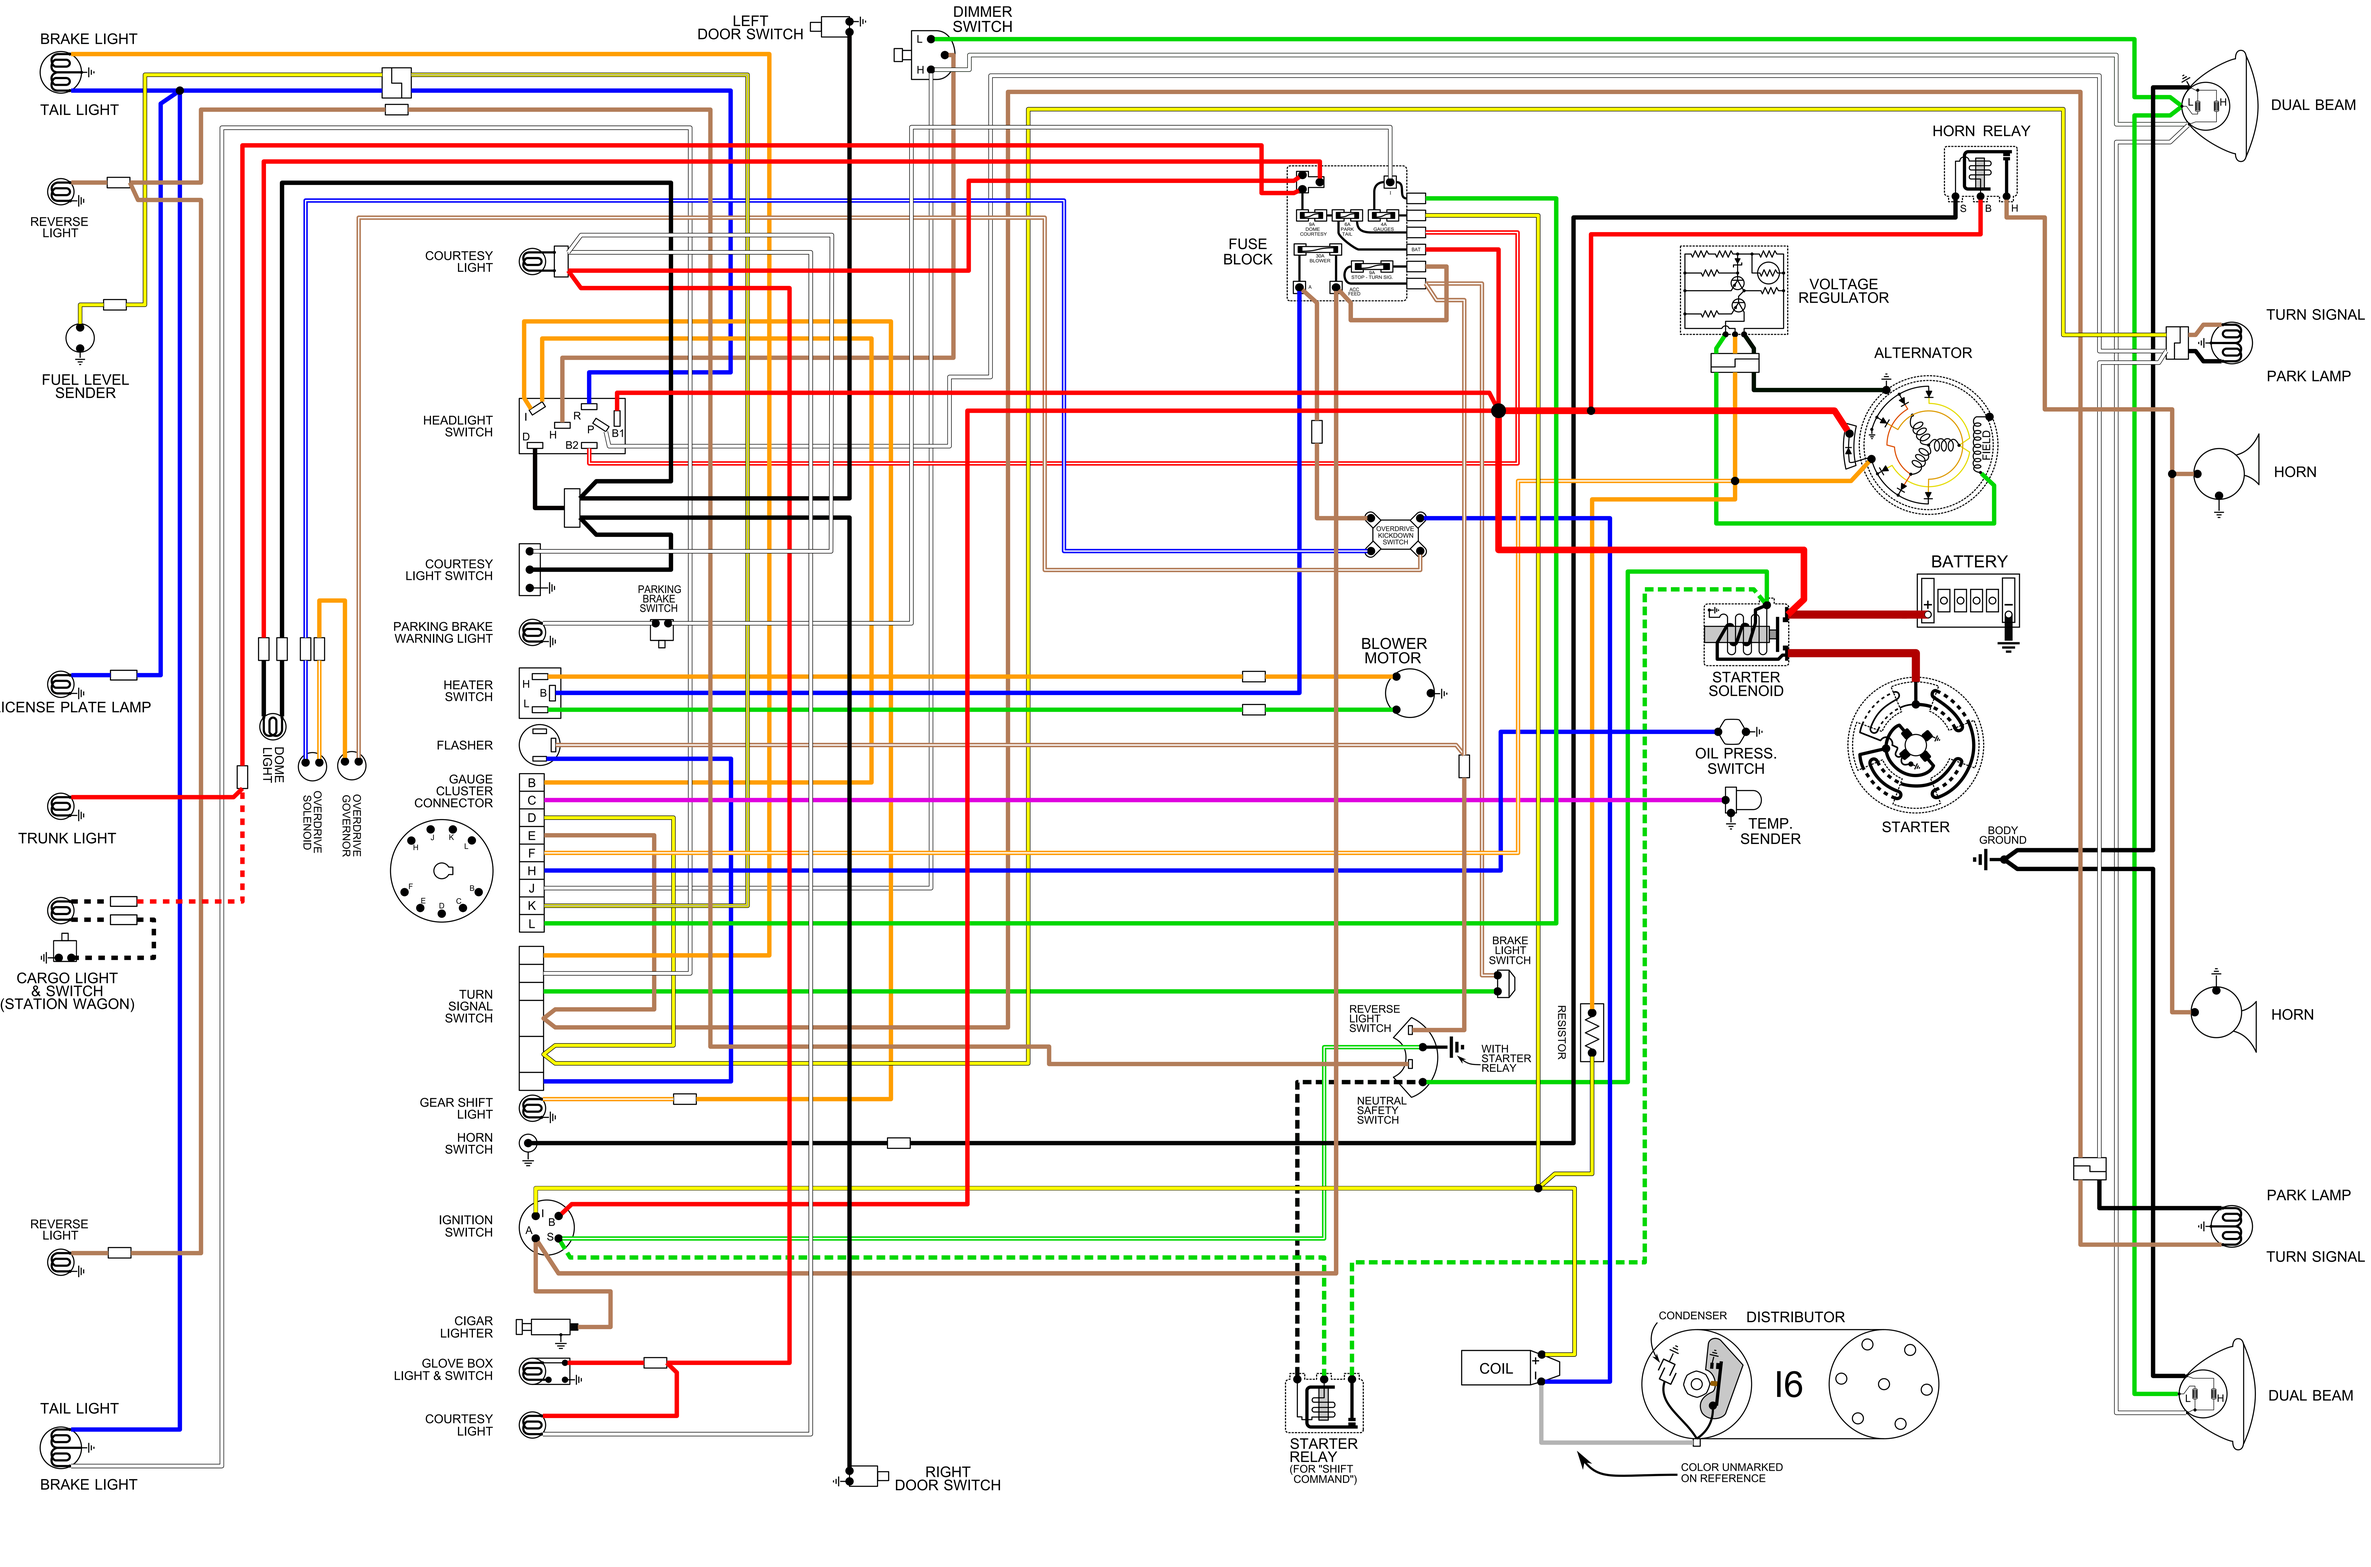

CINCO

1965 RAMBLER AMERICAN 6

MAIN POWER

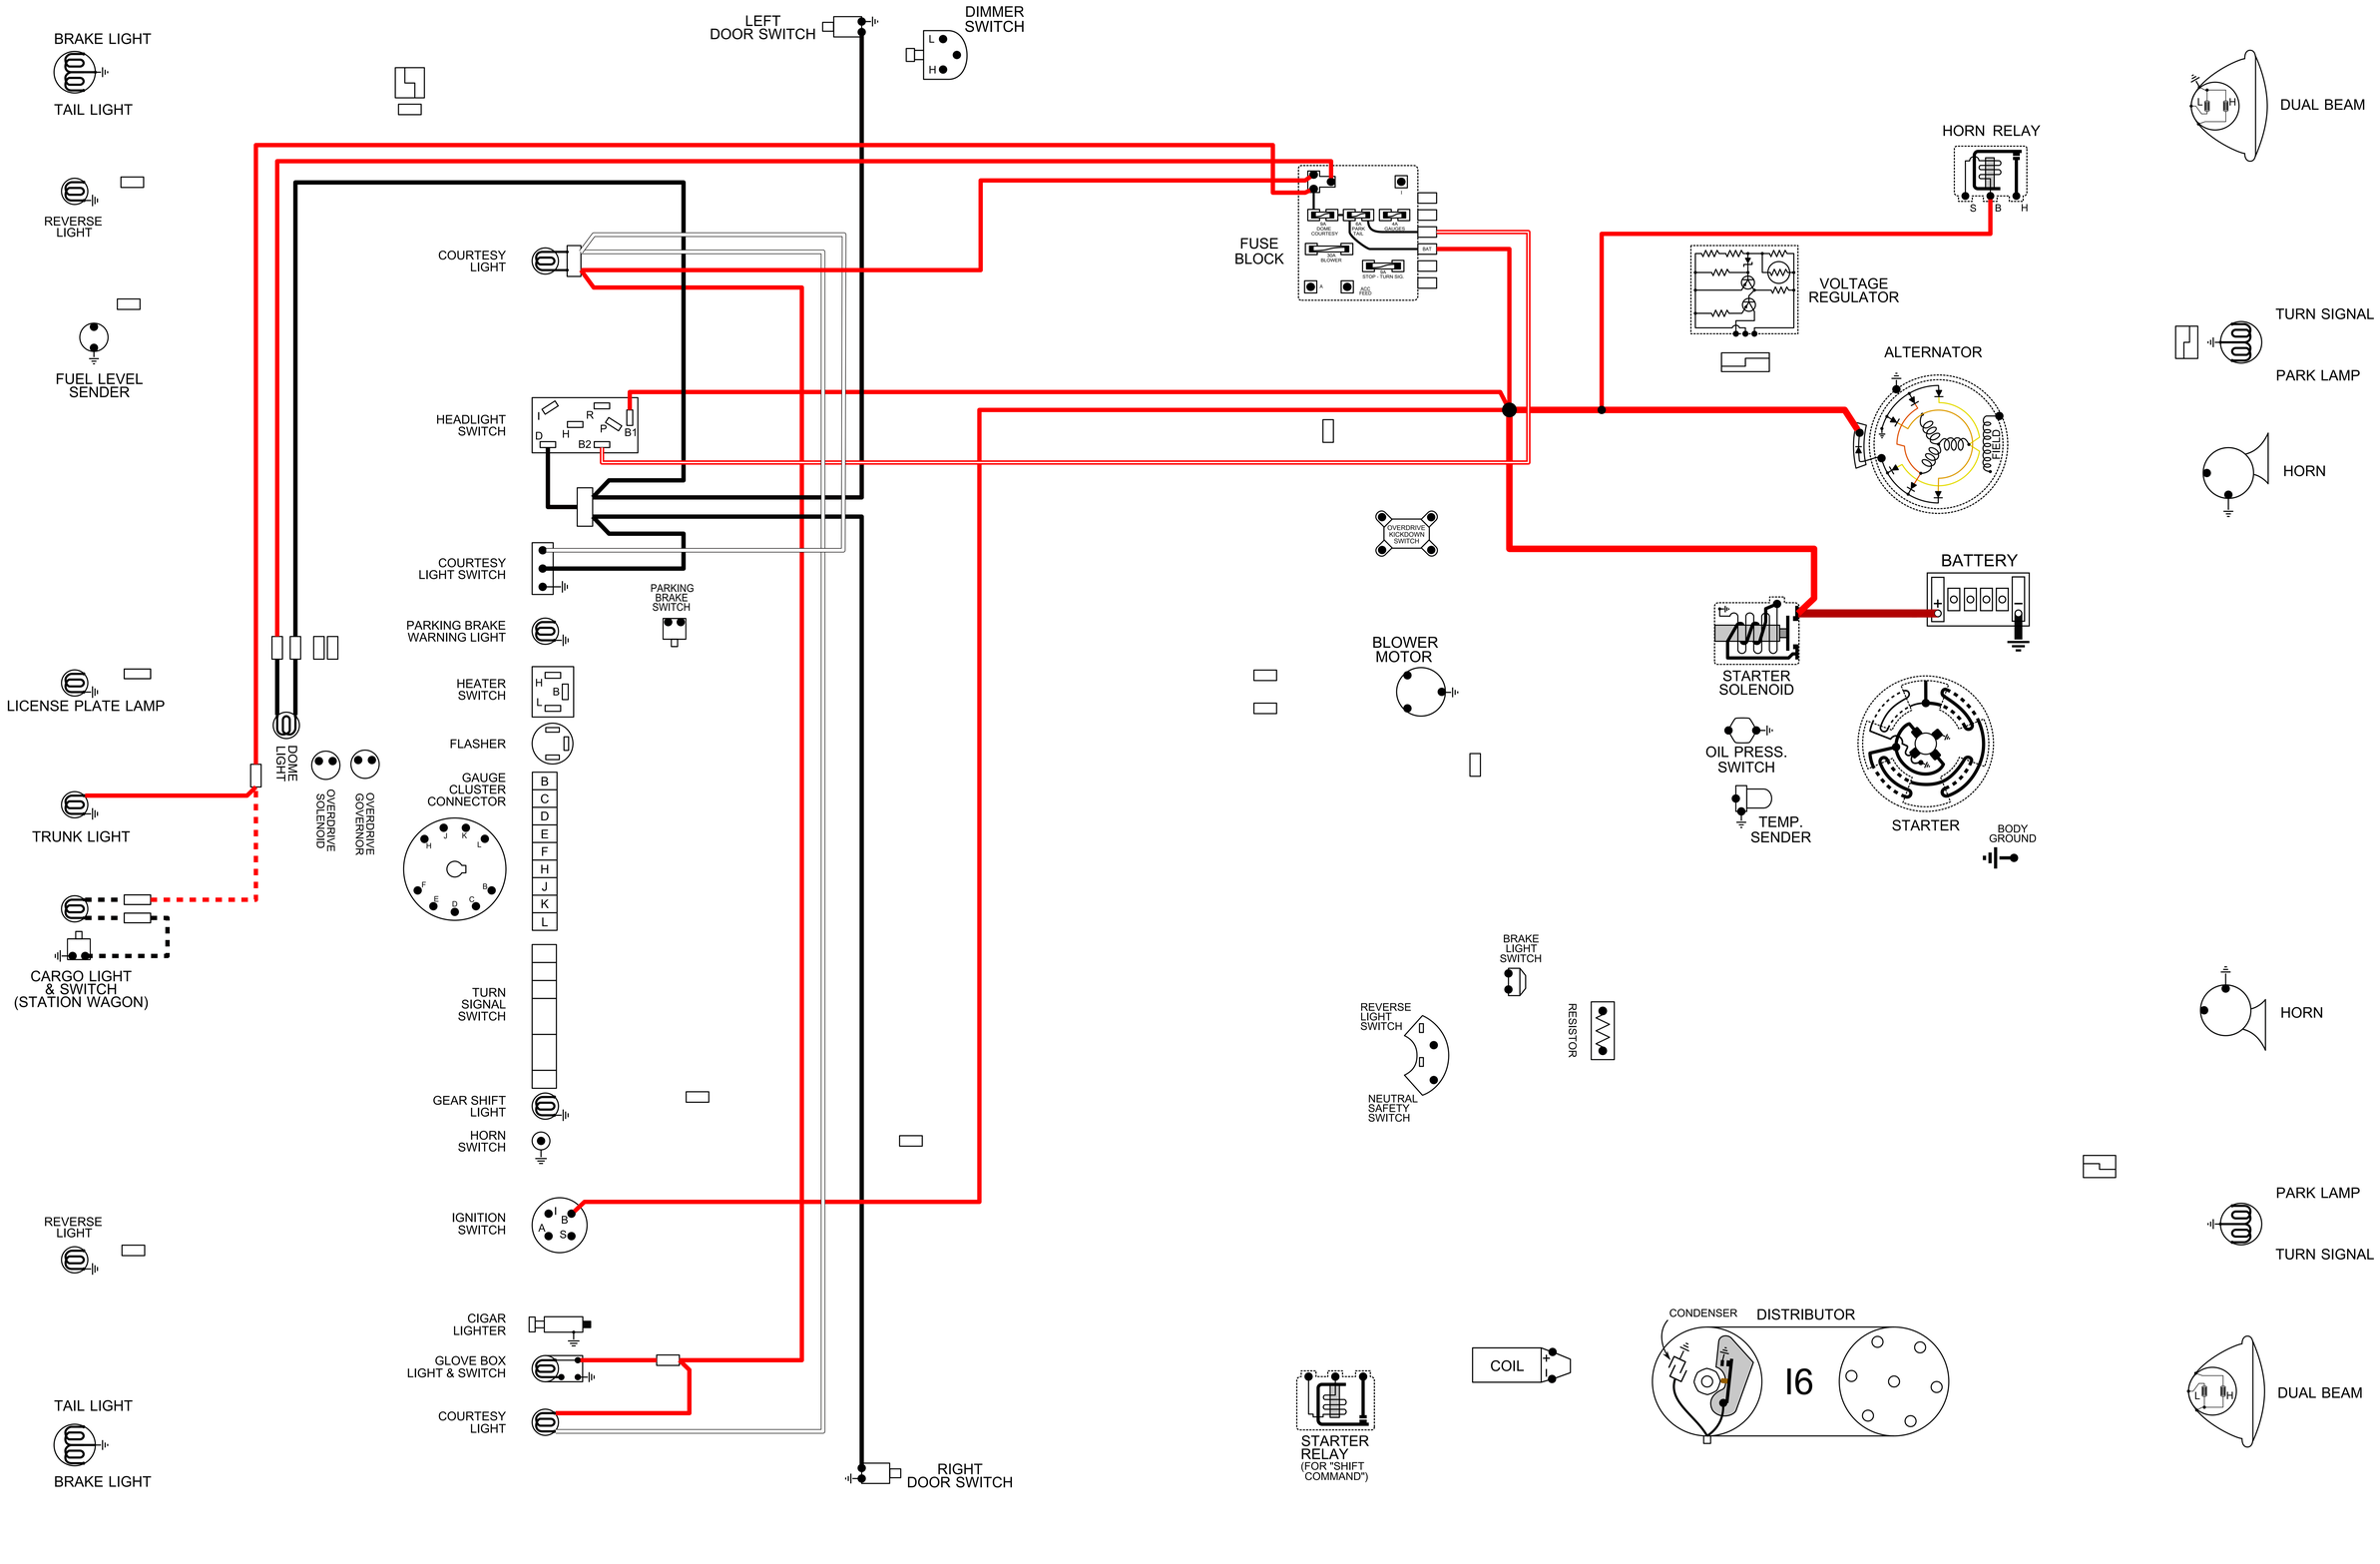

CINCO

1965 RAMBLER AMERICAN 6

ACCESSORY POWER

BRAKE LIGHT

TAIL LIGHT

REVERSE LIGHT

FUEL LEVEL SENDER

LICENSE PLATE LAMP

TRUNK LIGHT

CARGO LIGHT & SWITCH (STATION WAGON)

REVERSE LIGHT

TAIL LIGHT

BRAKE LIGHT

LEFT DOOR SWITCH

DIMMER SWITCH

COURTESY LIGHT

HEADLIGHT SWITCH

COURTESY LIGHT SWITCH

PARKING BRAKE WARNING LIGHT

PARKING BRAKE SWITCH

HEATER SWITCH

FLASHER

DOME LIGHT

OVERDRIVE SOLENOID

OVERDRIVE GOVERNOR

GAUGE CLUSTER CONNECTOR

TURN SIGNAL SWITCH

GEAR SHIFT LIGHT

HORN SWITCH

IGNITION SWITCH

FROM BATTERY

CIGAR LIGHTER

GLOVE BOX LIGHT & SWITCH

COURTESY LIGHT

RIGHT DOOR SWITCH

FUSE BLOCK

DOME COURTESY

PARK TAIL

GAUGES

SW. BLOWER

STOP - TURN SIG.

ACC. FEED

OVERDRIVE KICKDOWN SWITCH

BLOWER MOTOR

BRAKE LIGHT SWITCH

REVERSE LIGHT SWITCH

NEUTRAL SAFETY SWITCH

RESISTOR

STARTER RELAY (FOR "SHIFT COMMAND")

COIL

HORN RELAY

S B H

VOLTAGE REGULATOR

ALTERNATOR

BATTERY

STARTER SOLENOID

OIL PRESS. SWITCH

TEMP. SENDER

STARTER

BODY GROUND

CONDENSER

DISTRIBUTOR

I6

DUAL BEAM

TURN SIGNAL

PARK LAMP

HORN

HORN

PARK LAMP

TURN SIGNAL

DUAL BEAM

CINCO

1965 RAMBLER AMERICAN 6


IGNITION SYSTEM

BRAKE LIGHT
TAIL LIGHT
REVERSE LIGHT
FUEL LEVEL SENDER
LICENSE PLATE LAMP
TRUNK LIGHT
CARGO LIGHT & SWITCH (STATION WAGON)
REVERSE LIGHT
TAIL LIGHT
BRAKE LIGHT
DOME LIGHT
OVERDRIVE SOLENOID
OVERDRIVE GOVERNOR
LEFT DOOR SWITCH
DIMMER SWITCH
COURTESY LIGHT
HEADLIGHT SWITCH
COURTESY LIGHT SWITCH
PARKING BRAKE SWITCH
PARKING BRAKE WARNING LIGHT
HEATER SWITCH
FLASHER
GAUGE CLUSTER CONNECTOR
TURN SIGNAL SWITCH
GEAR SHIFT LIGHT
HORN SWITCH
IGNITION SWITCH
FROM BATTERY
CIGAR LIGHTER
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
RIGHT DOOR SWITCH
FUSE BLOCK
OVERDRIVE KICKDOWN SWITCH
BLOWER MOTOR
BRAKE LIGHT SWITCH
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
RESISTOR
STARTER RELAY (FOR "SHIFT COMMAND")
COIL
CONDENSER
DISTRIBUTOR
I6
COLOR UNMARKED ON REFERENCE
HORN RELAY
VOLTAGE REGULATOR
ALTERNATOR
BATTERY
STARTER SOLENOID
OIL PRESS. SWITCH
TEMP. SENDER
STARTER
BODY GROUND
DUAL BEAM
TURN SIGNAL
PARK LAMP
HORN
HORN
PARK LAMP
TURN SIGNAL
DUAL BEAM

CINCO


1965 RAMBLER AMERICAN 6

STARTING SYSTEM

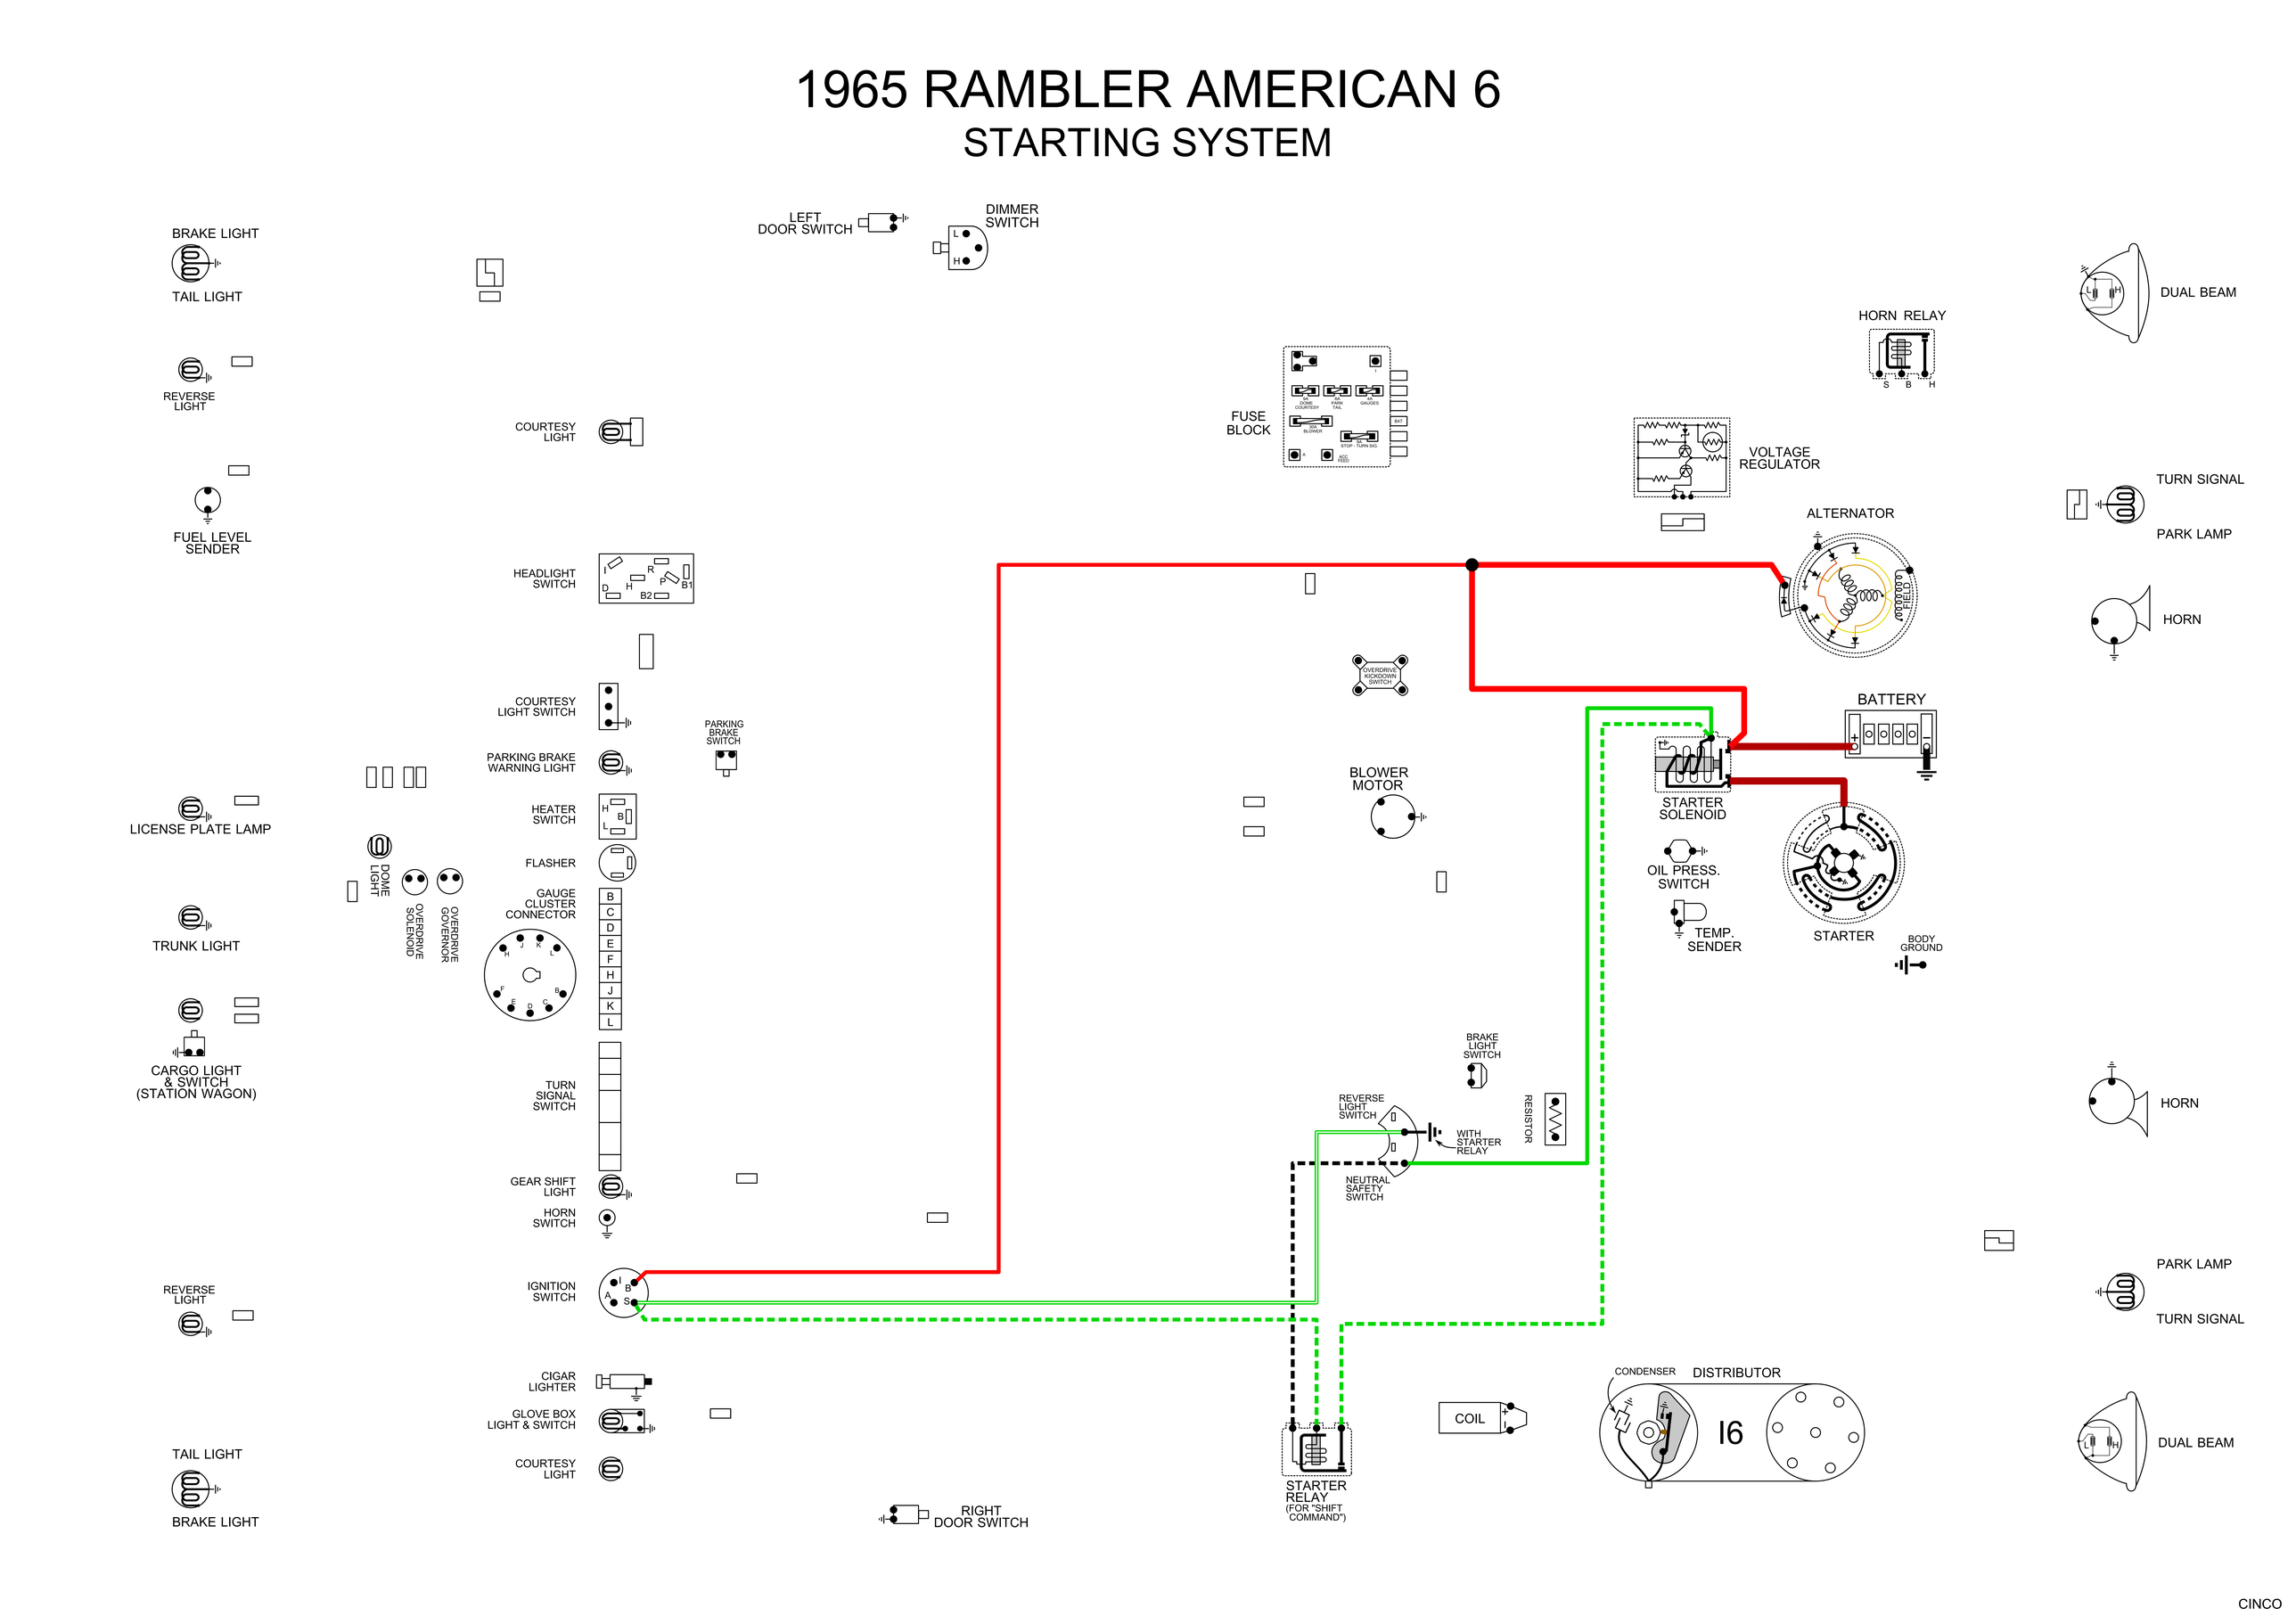

CINCO


1965 RAMBLER AMERICAN 6
CHARGING SYSTEM

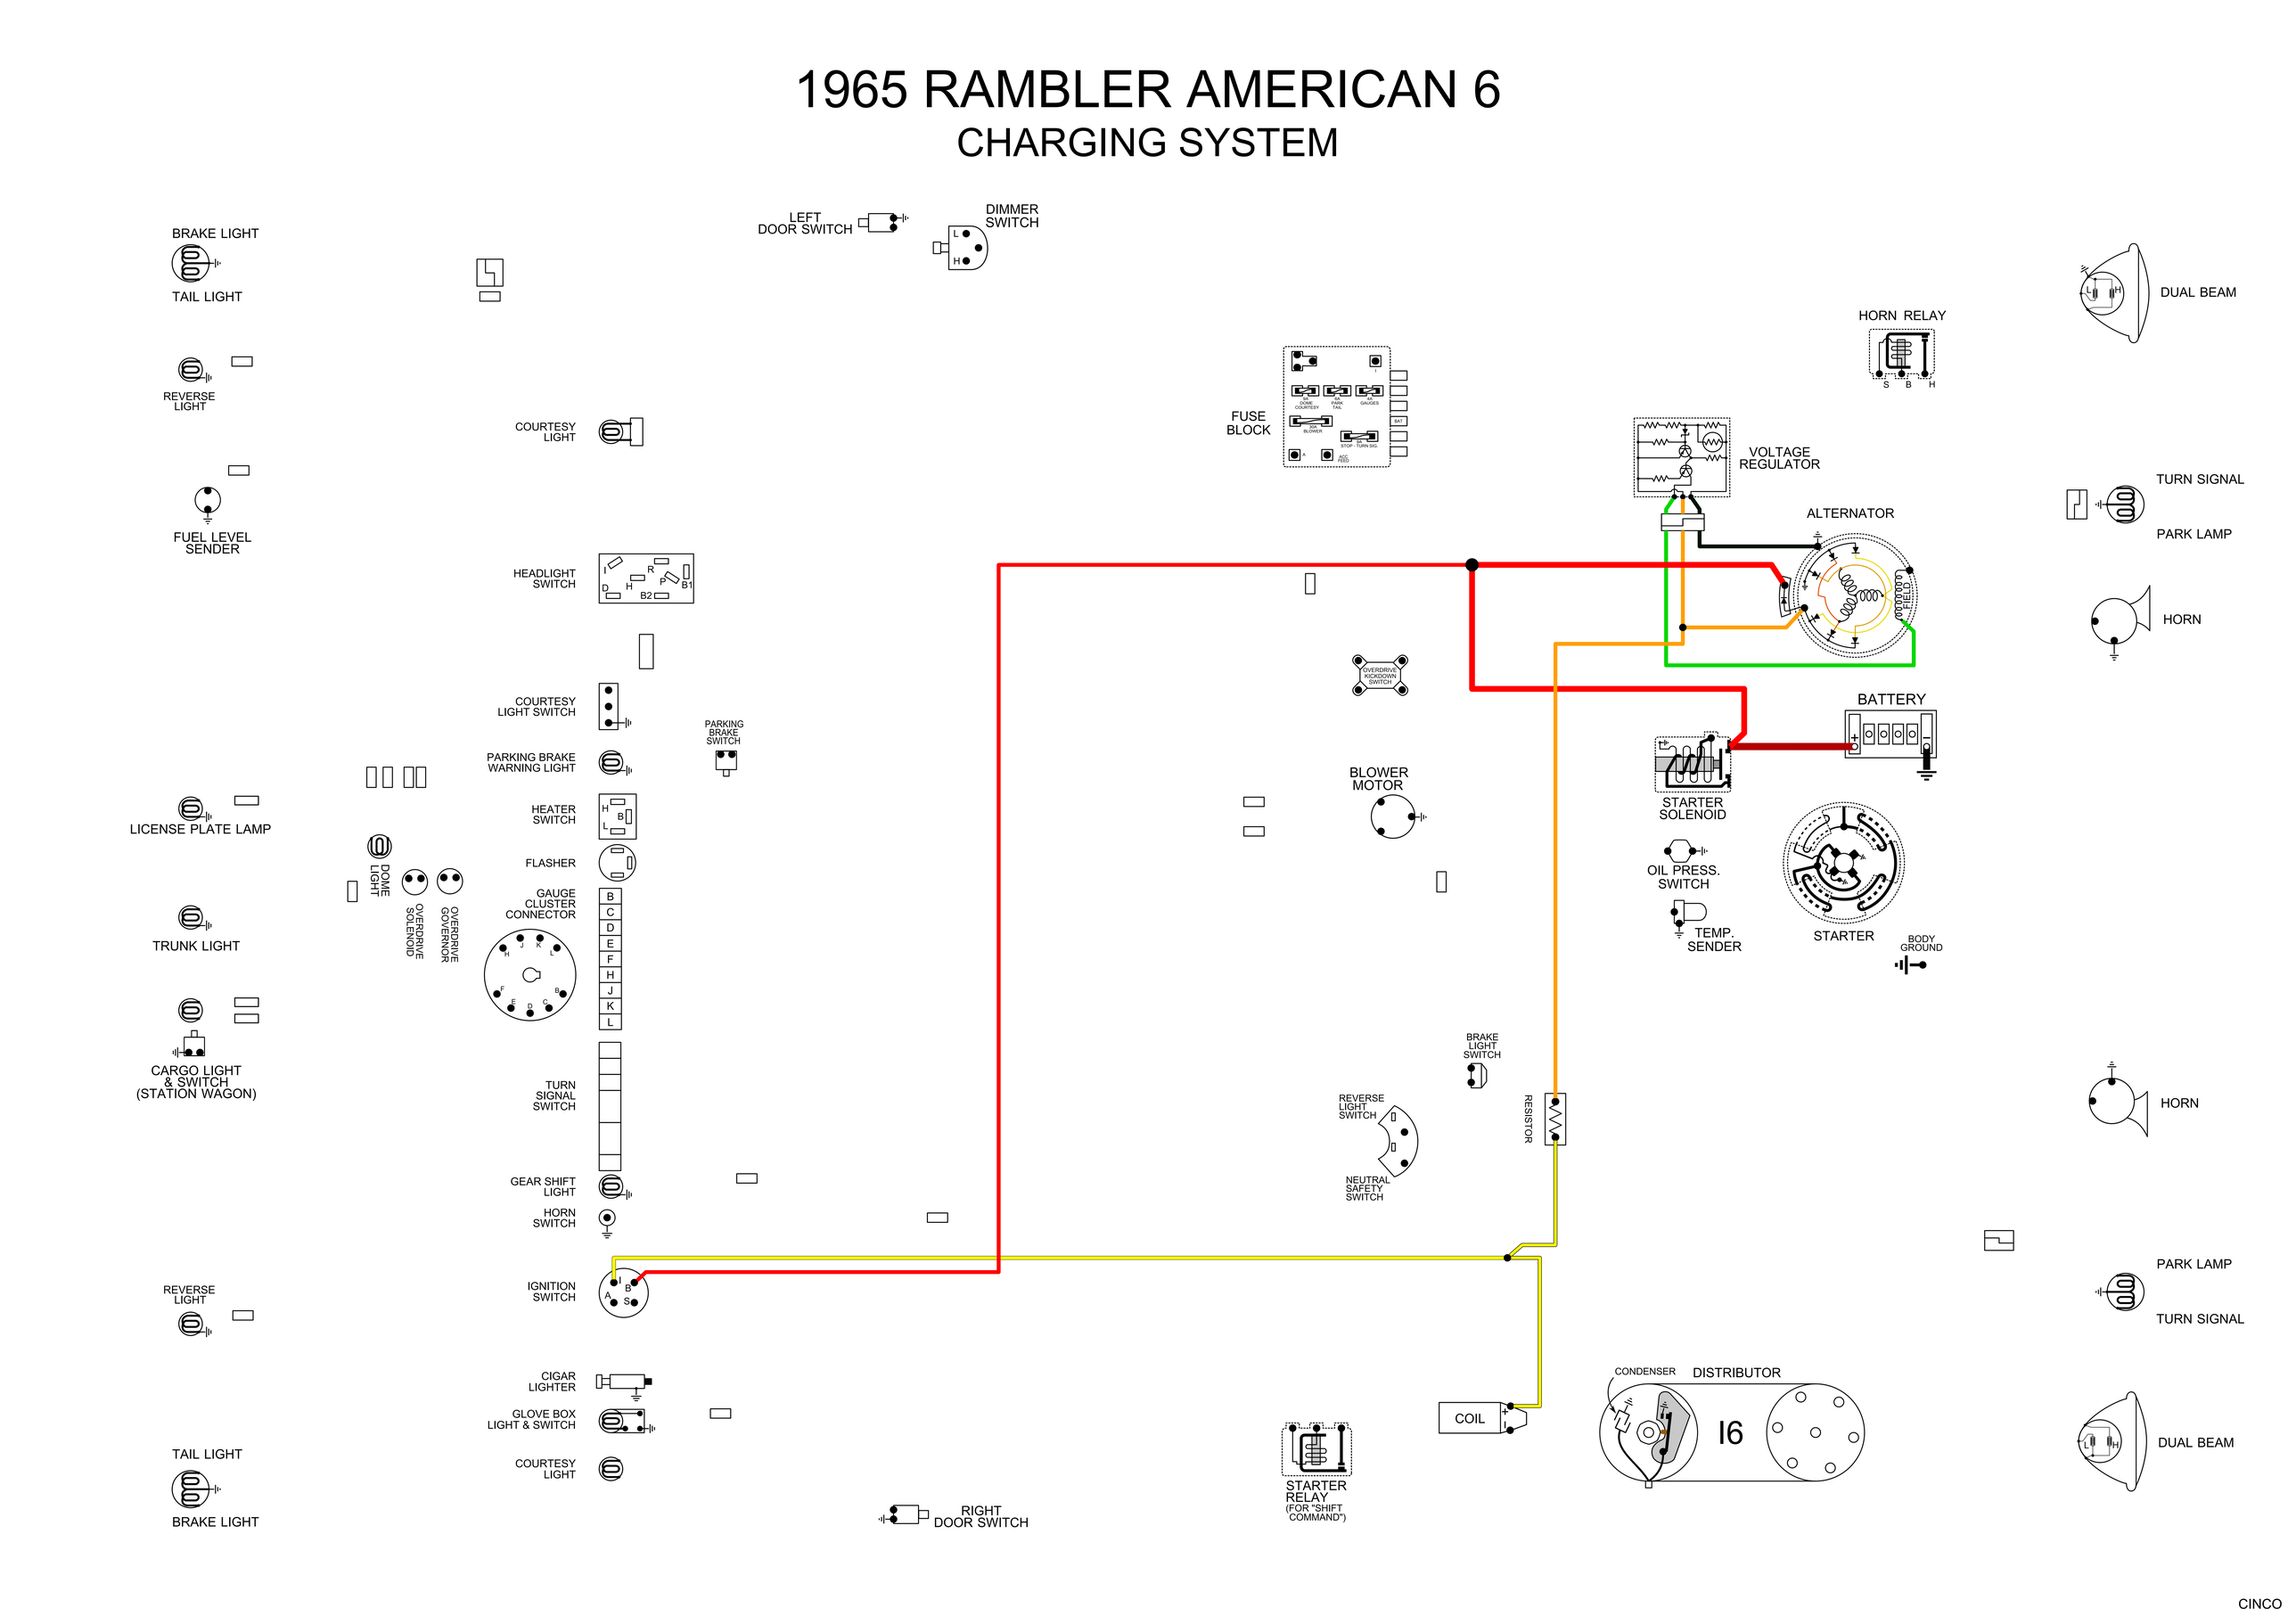

CINCO


1965 RAMBLER AMERICAN 6

HEADLIGHTS

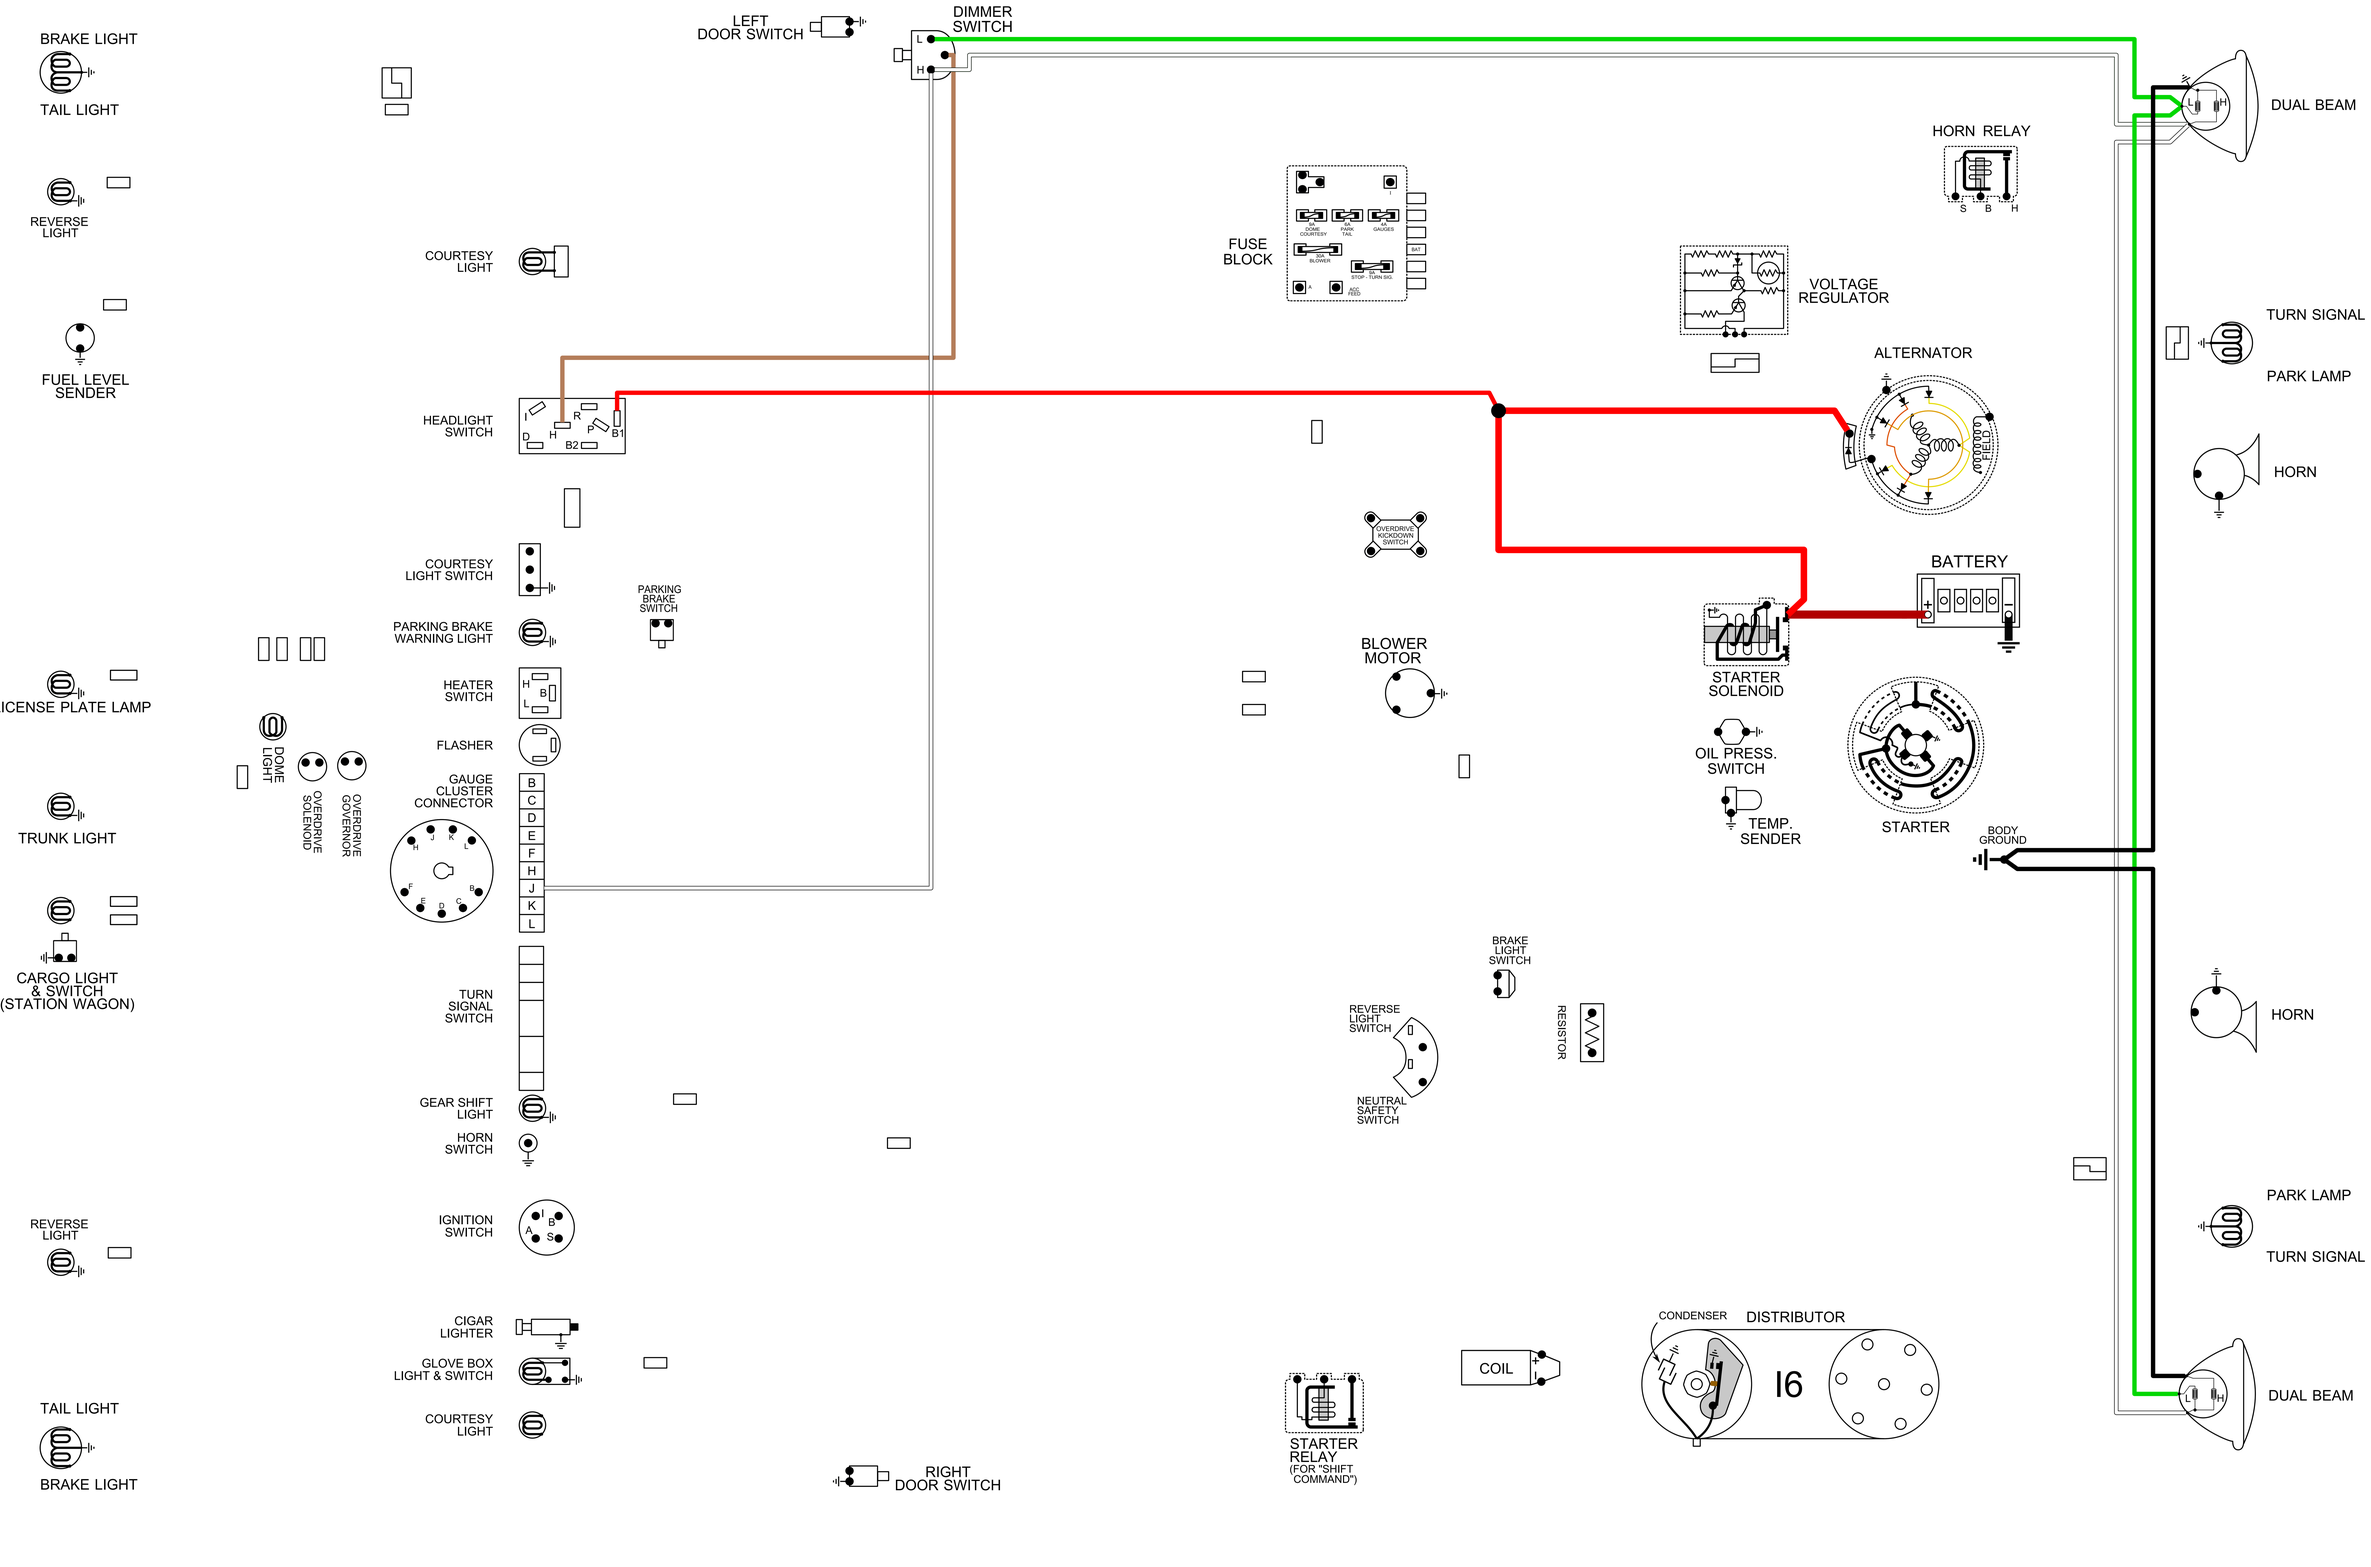

1965 RAMBLER AMERICAN 6


RUNNING LIGHTS

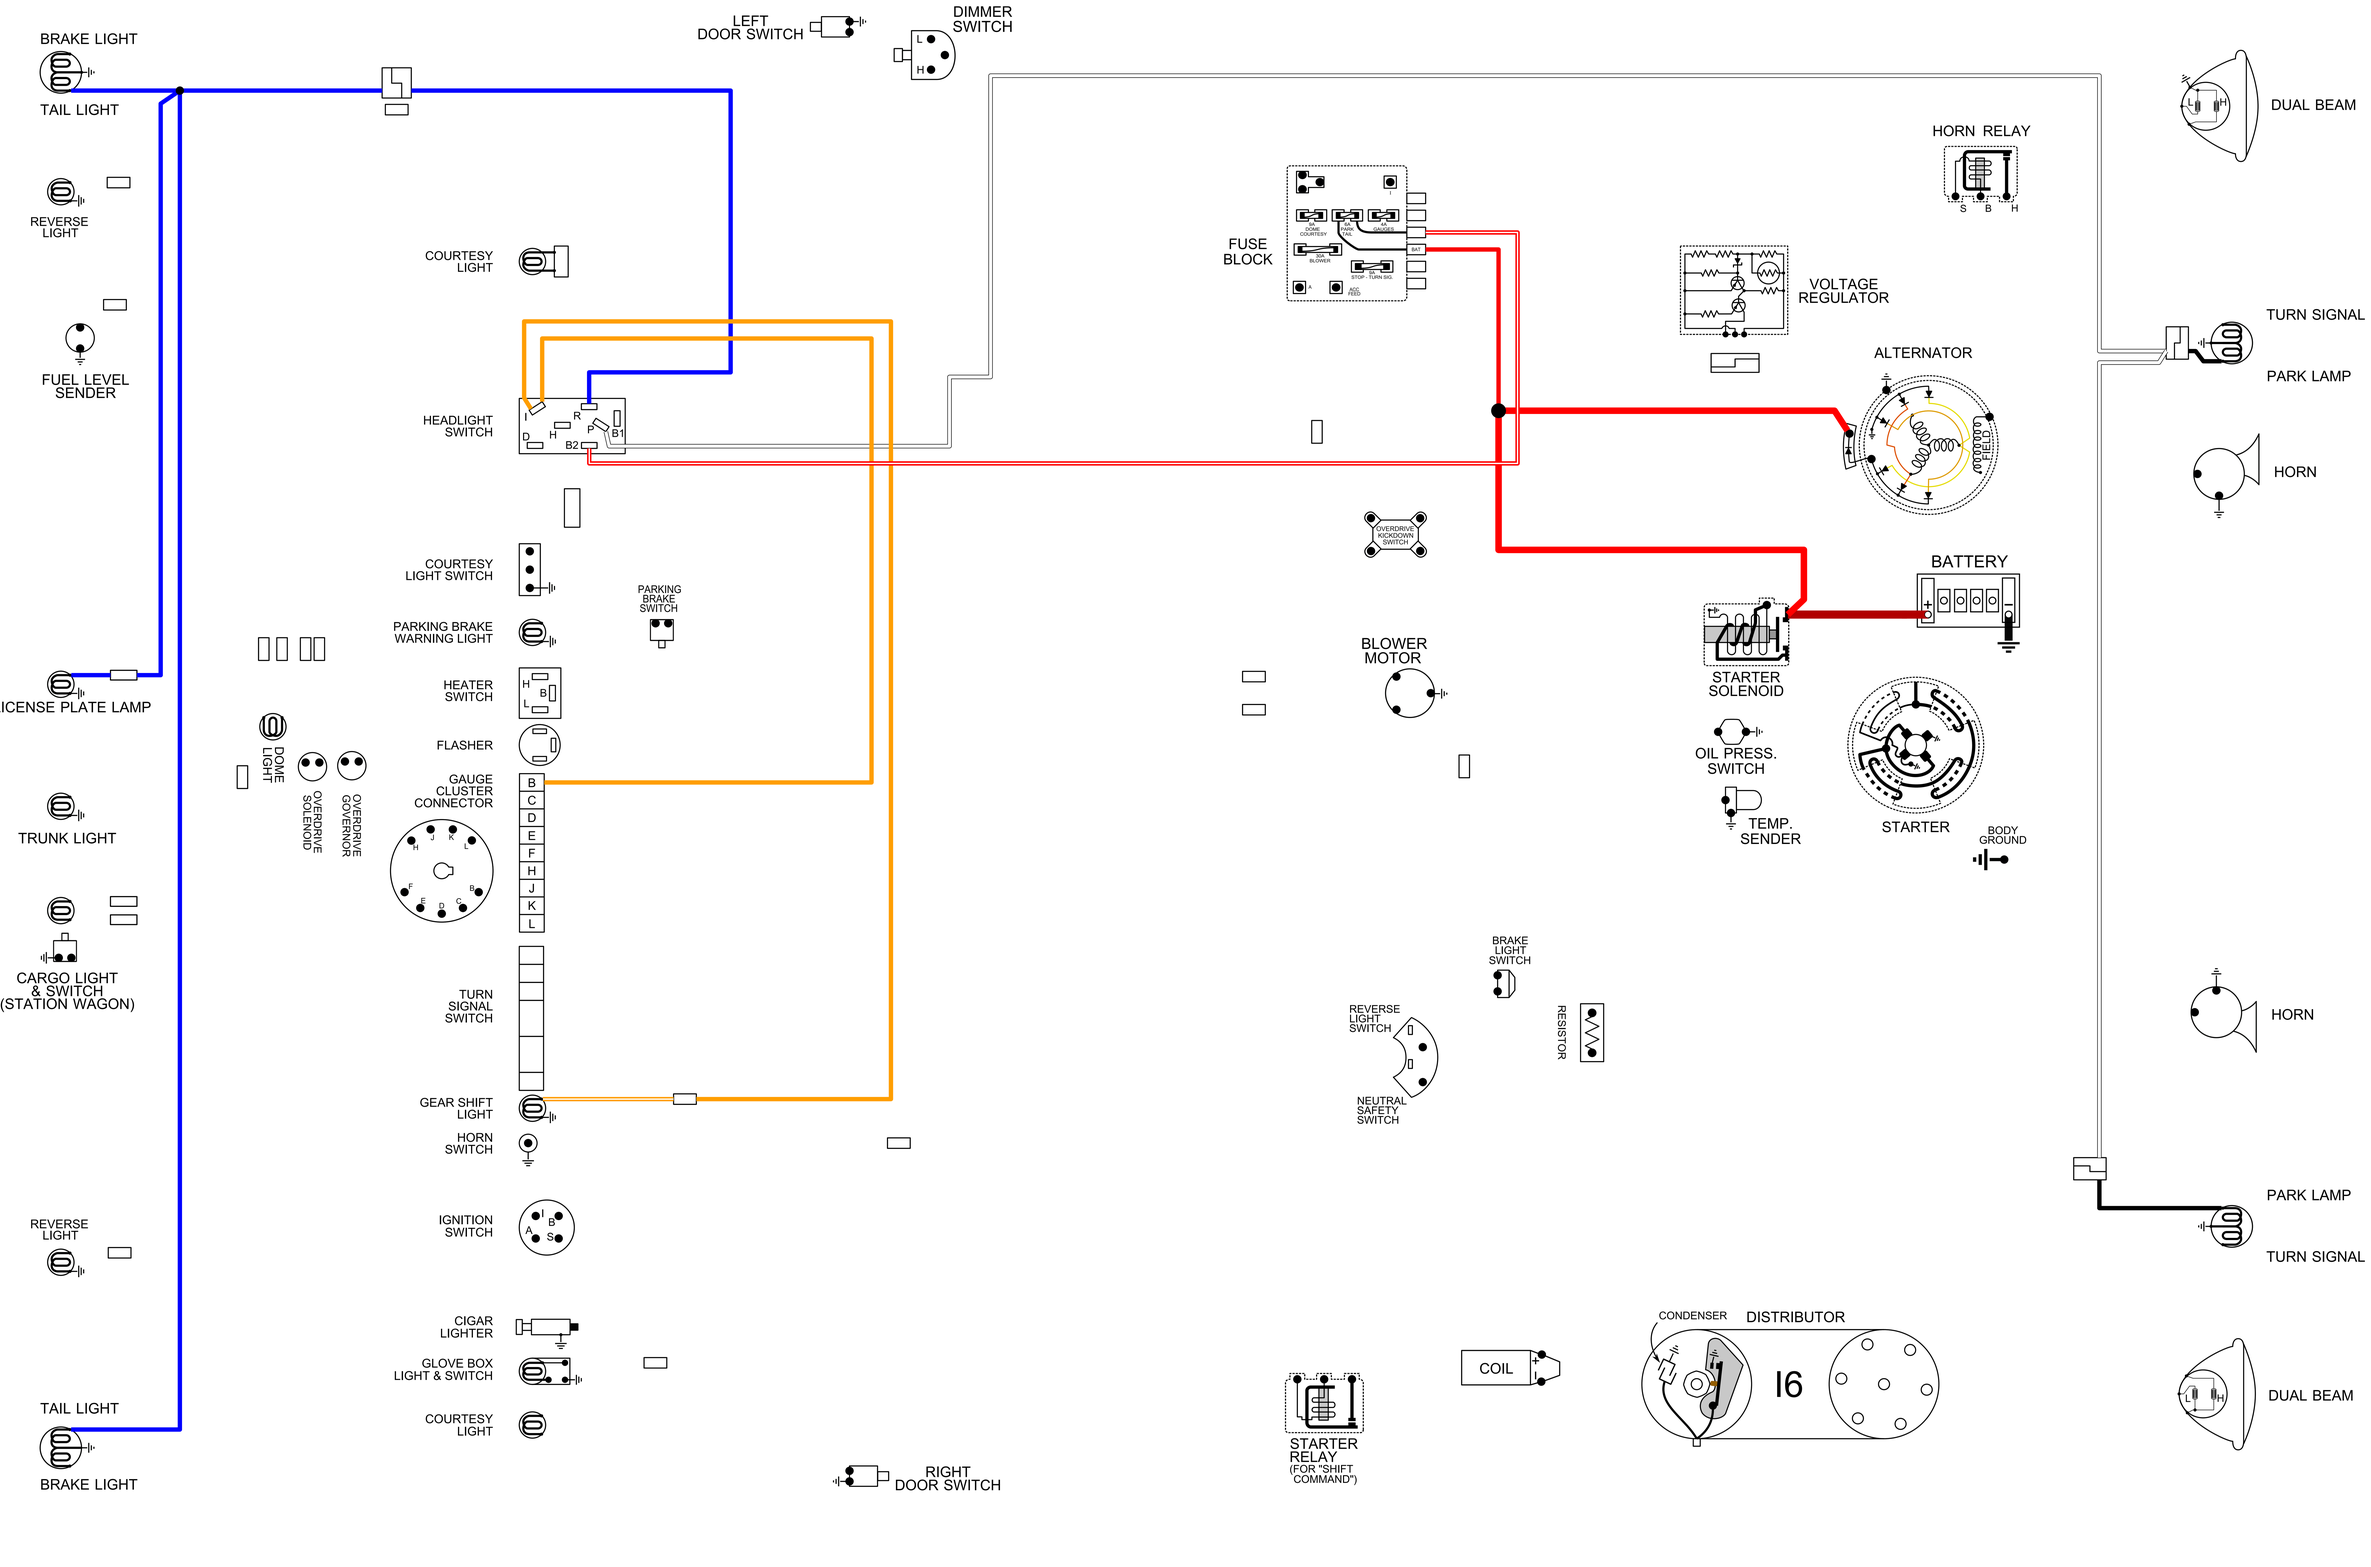

CINCO

1965 RAMBLER AMERICAN 6


BRAKE LIGHTS

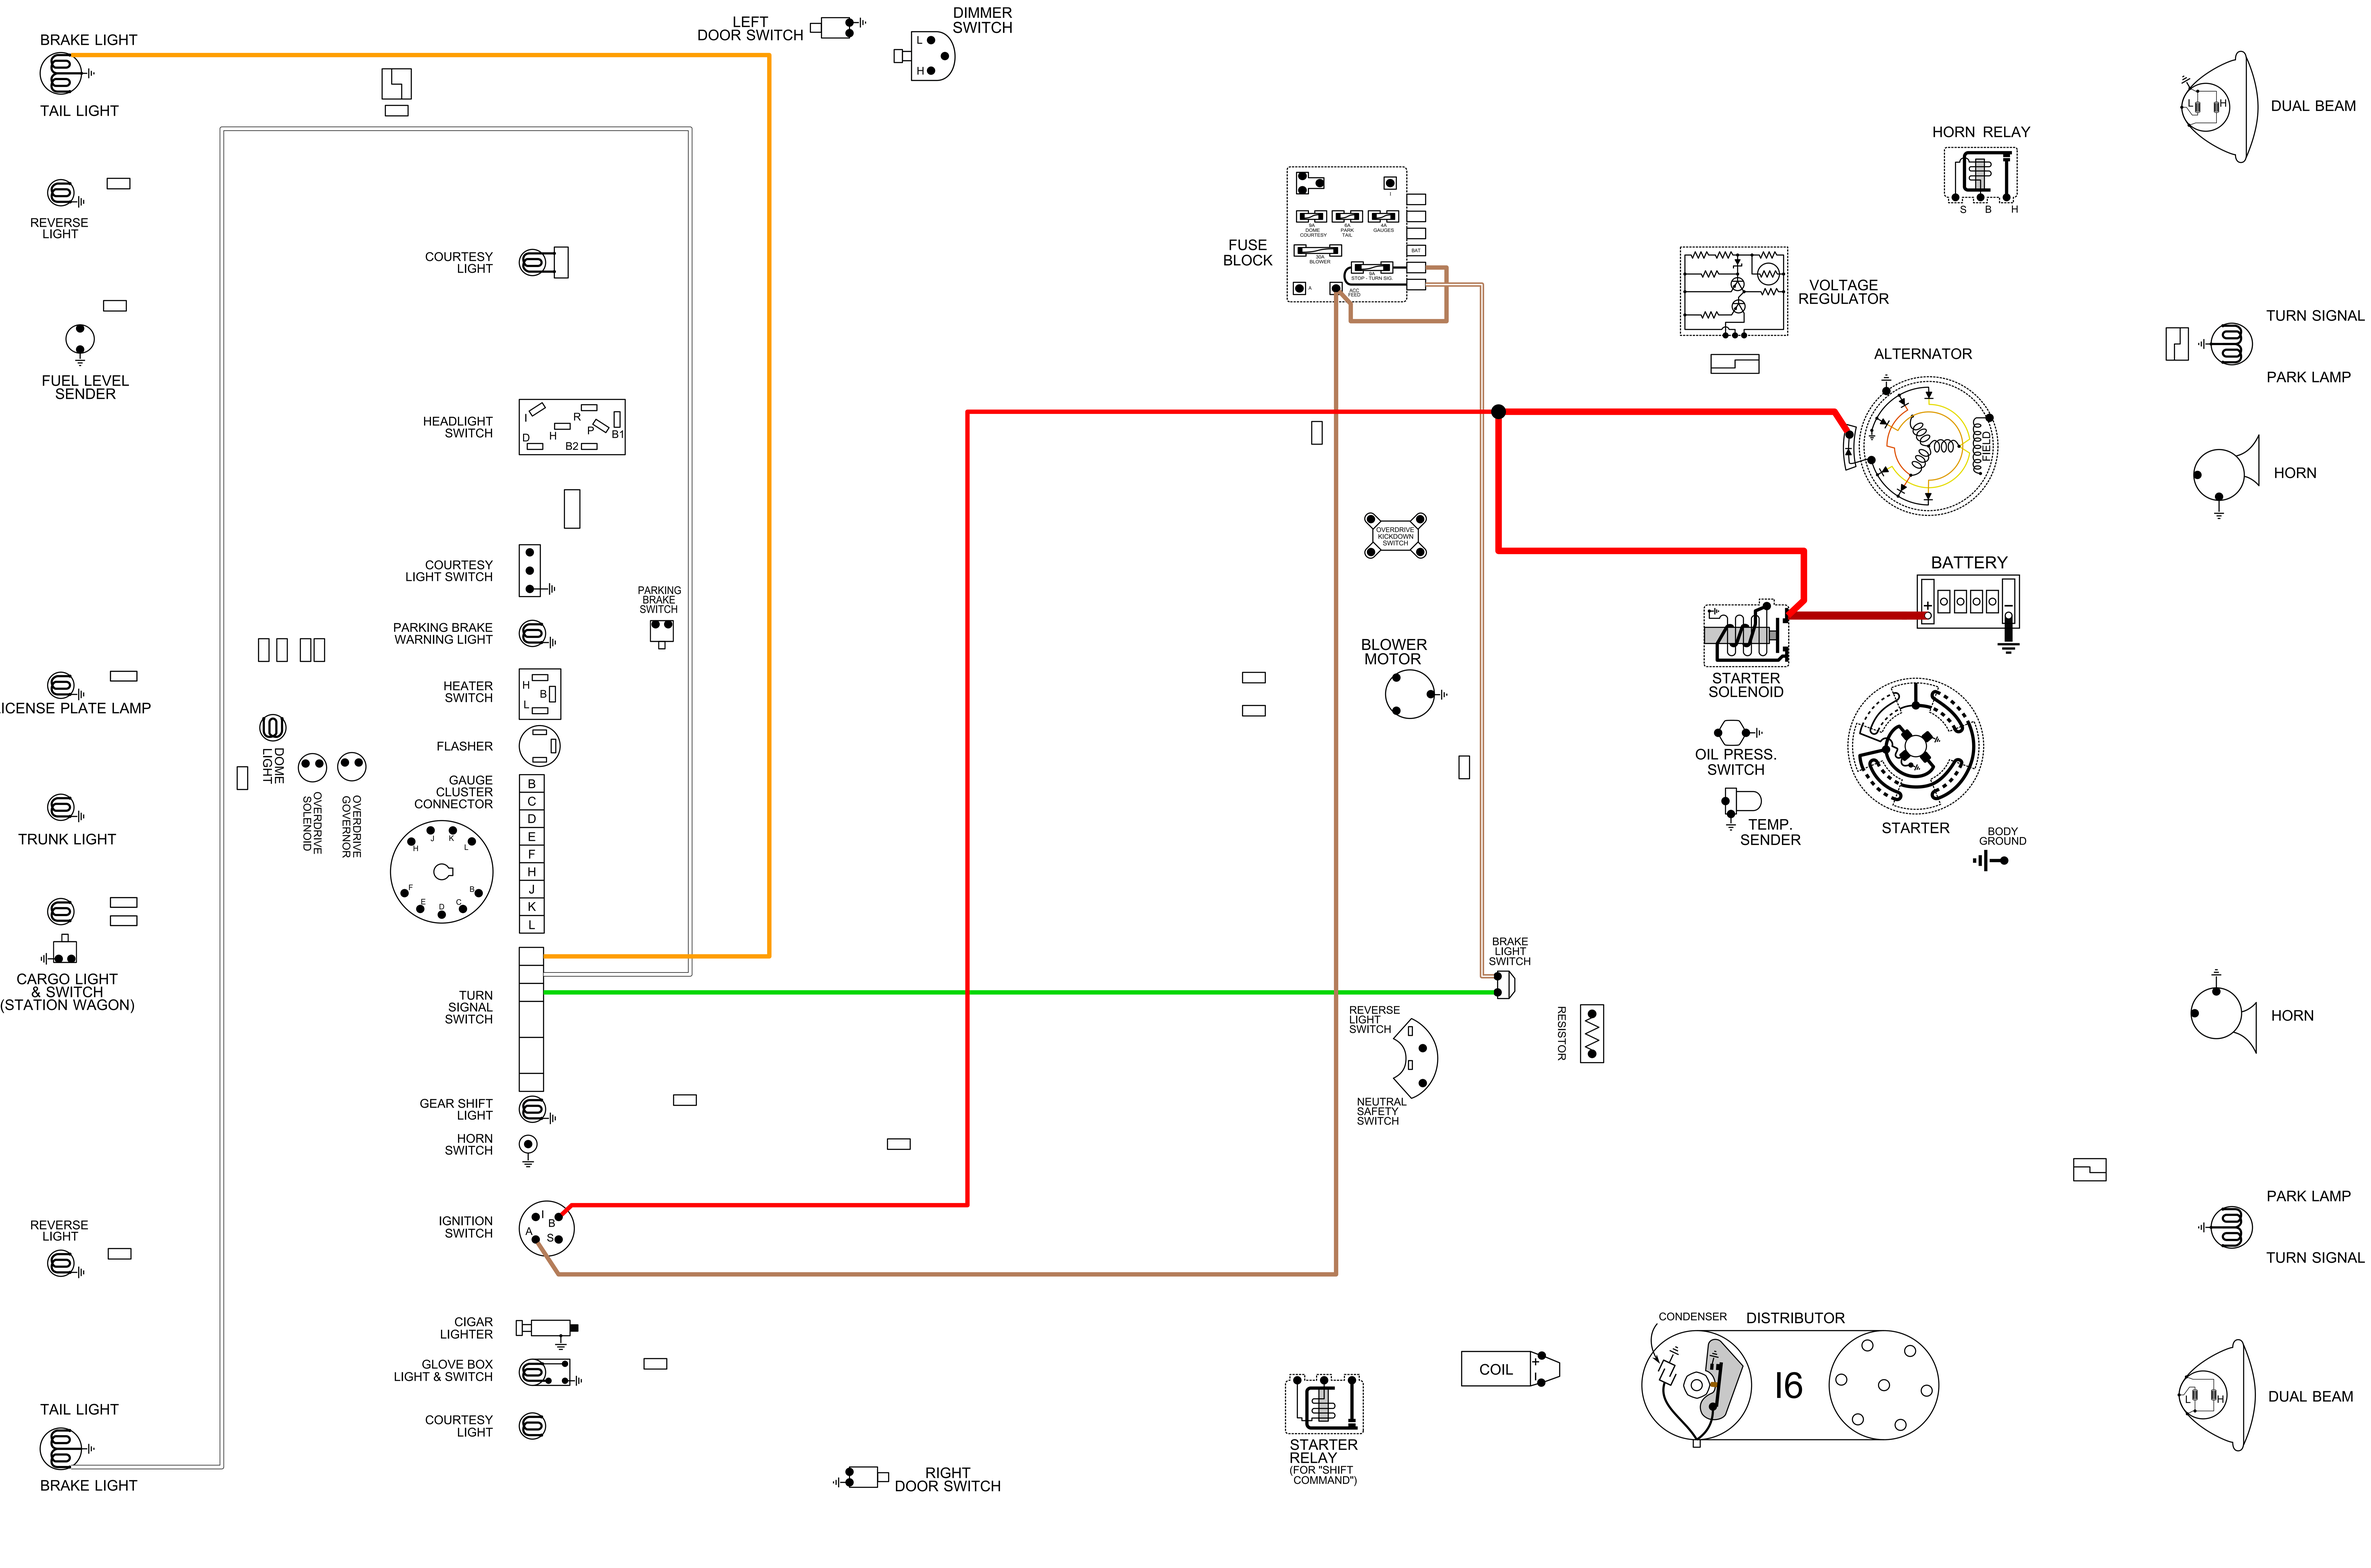

CINCO

1965 RAMBLER AMERICAN 6


TURN SIGNALS

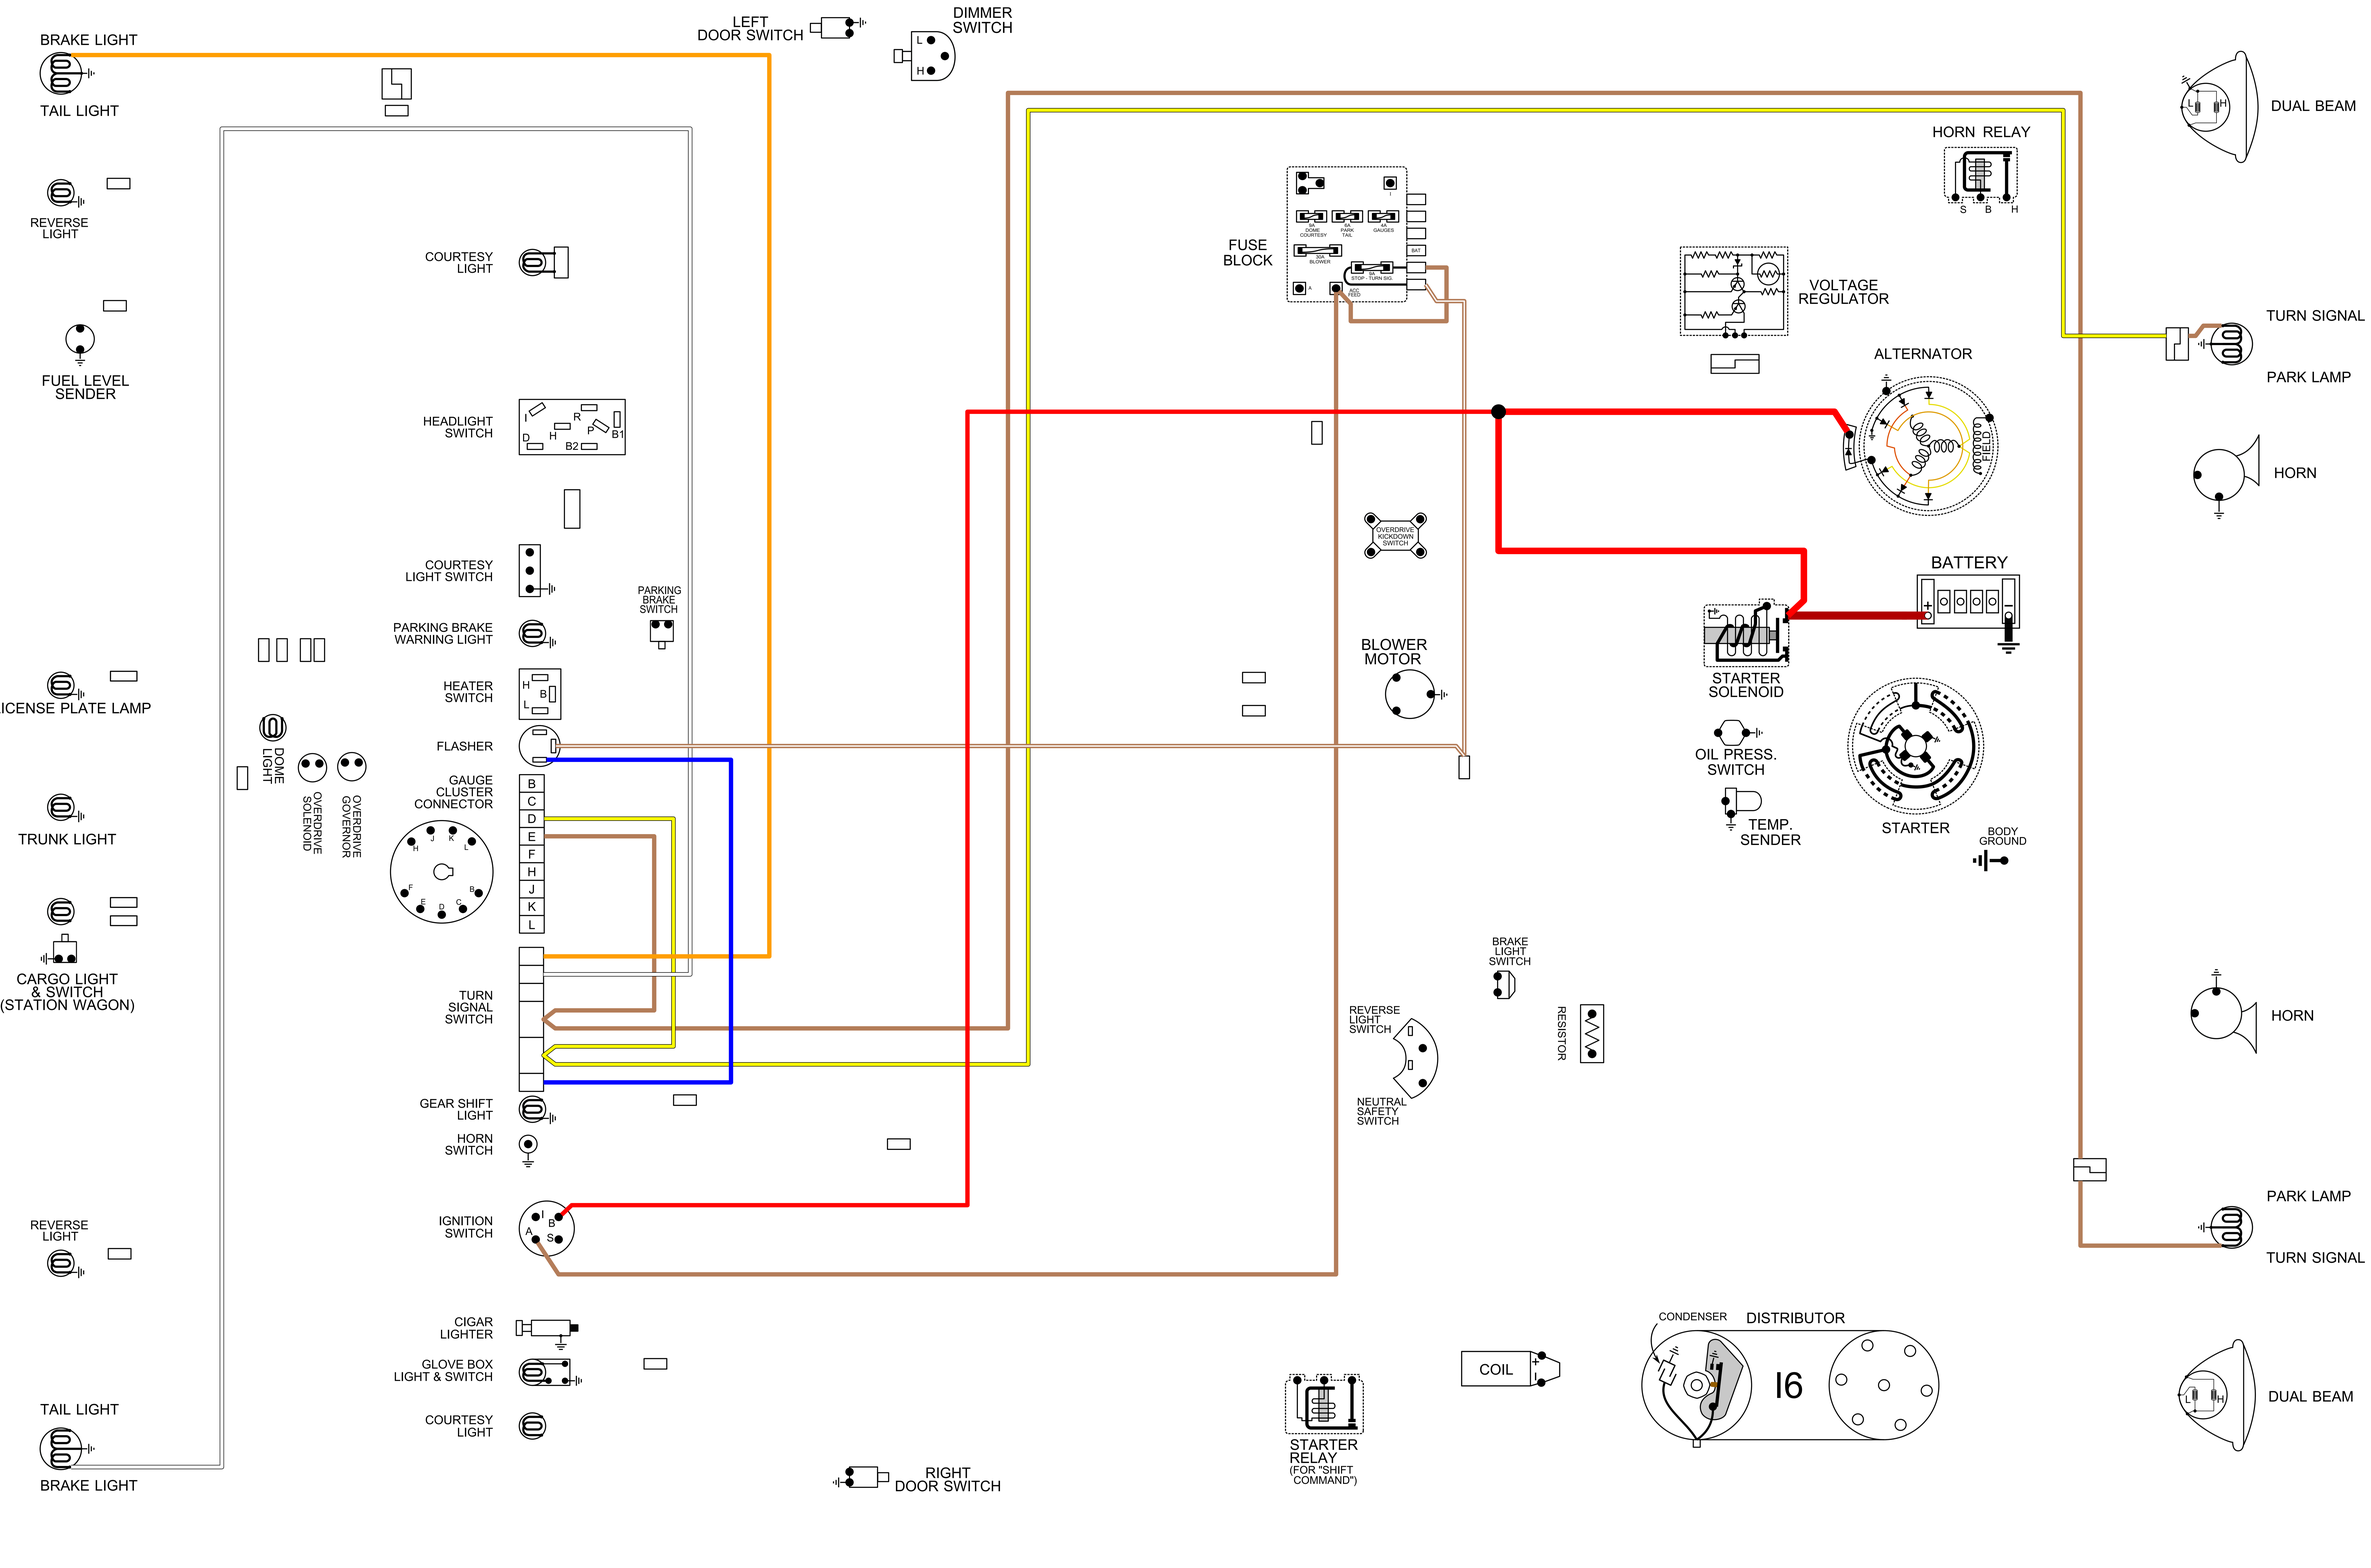

CINCO

1965 RAMBLER AMERICAN 6


HEATER

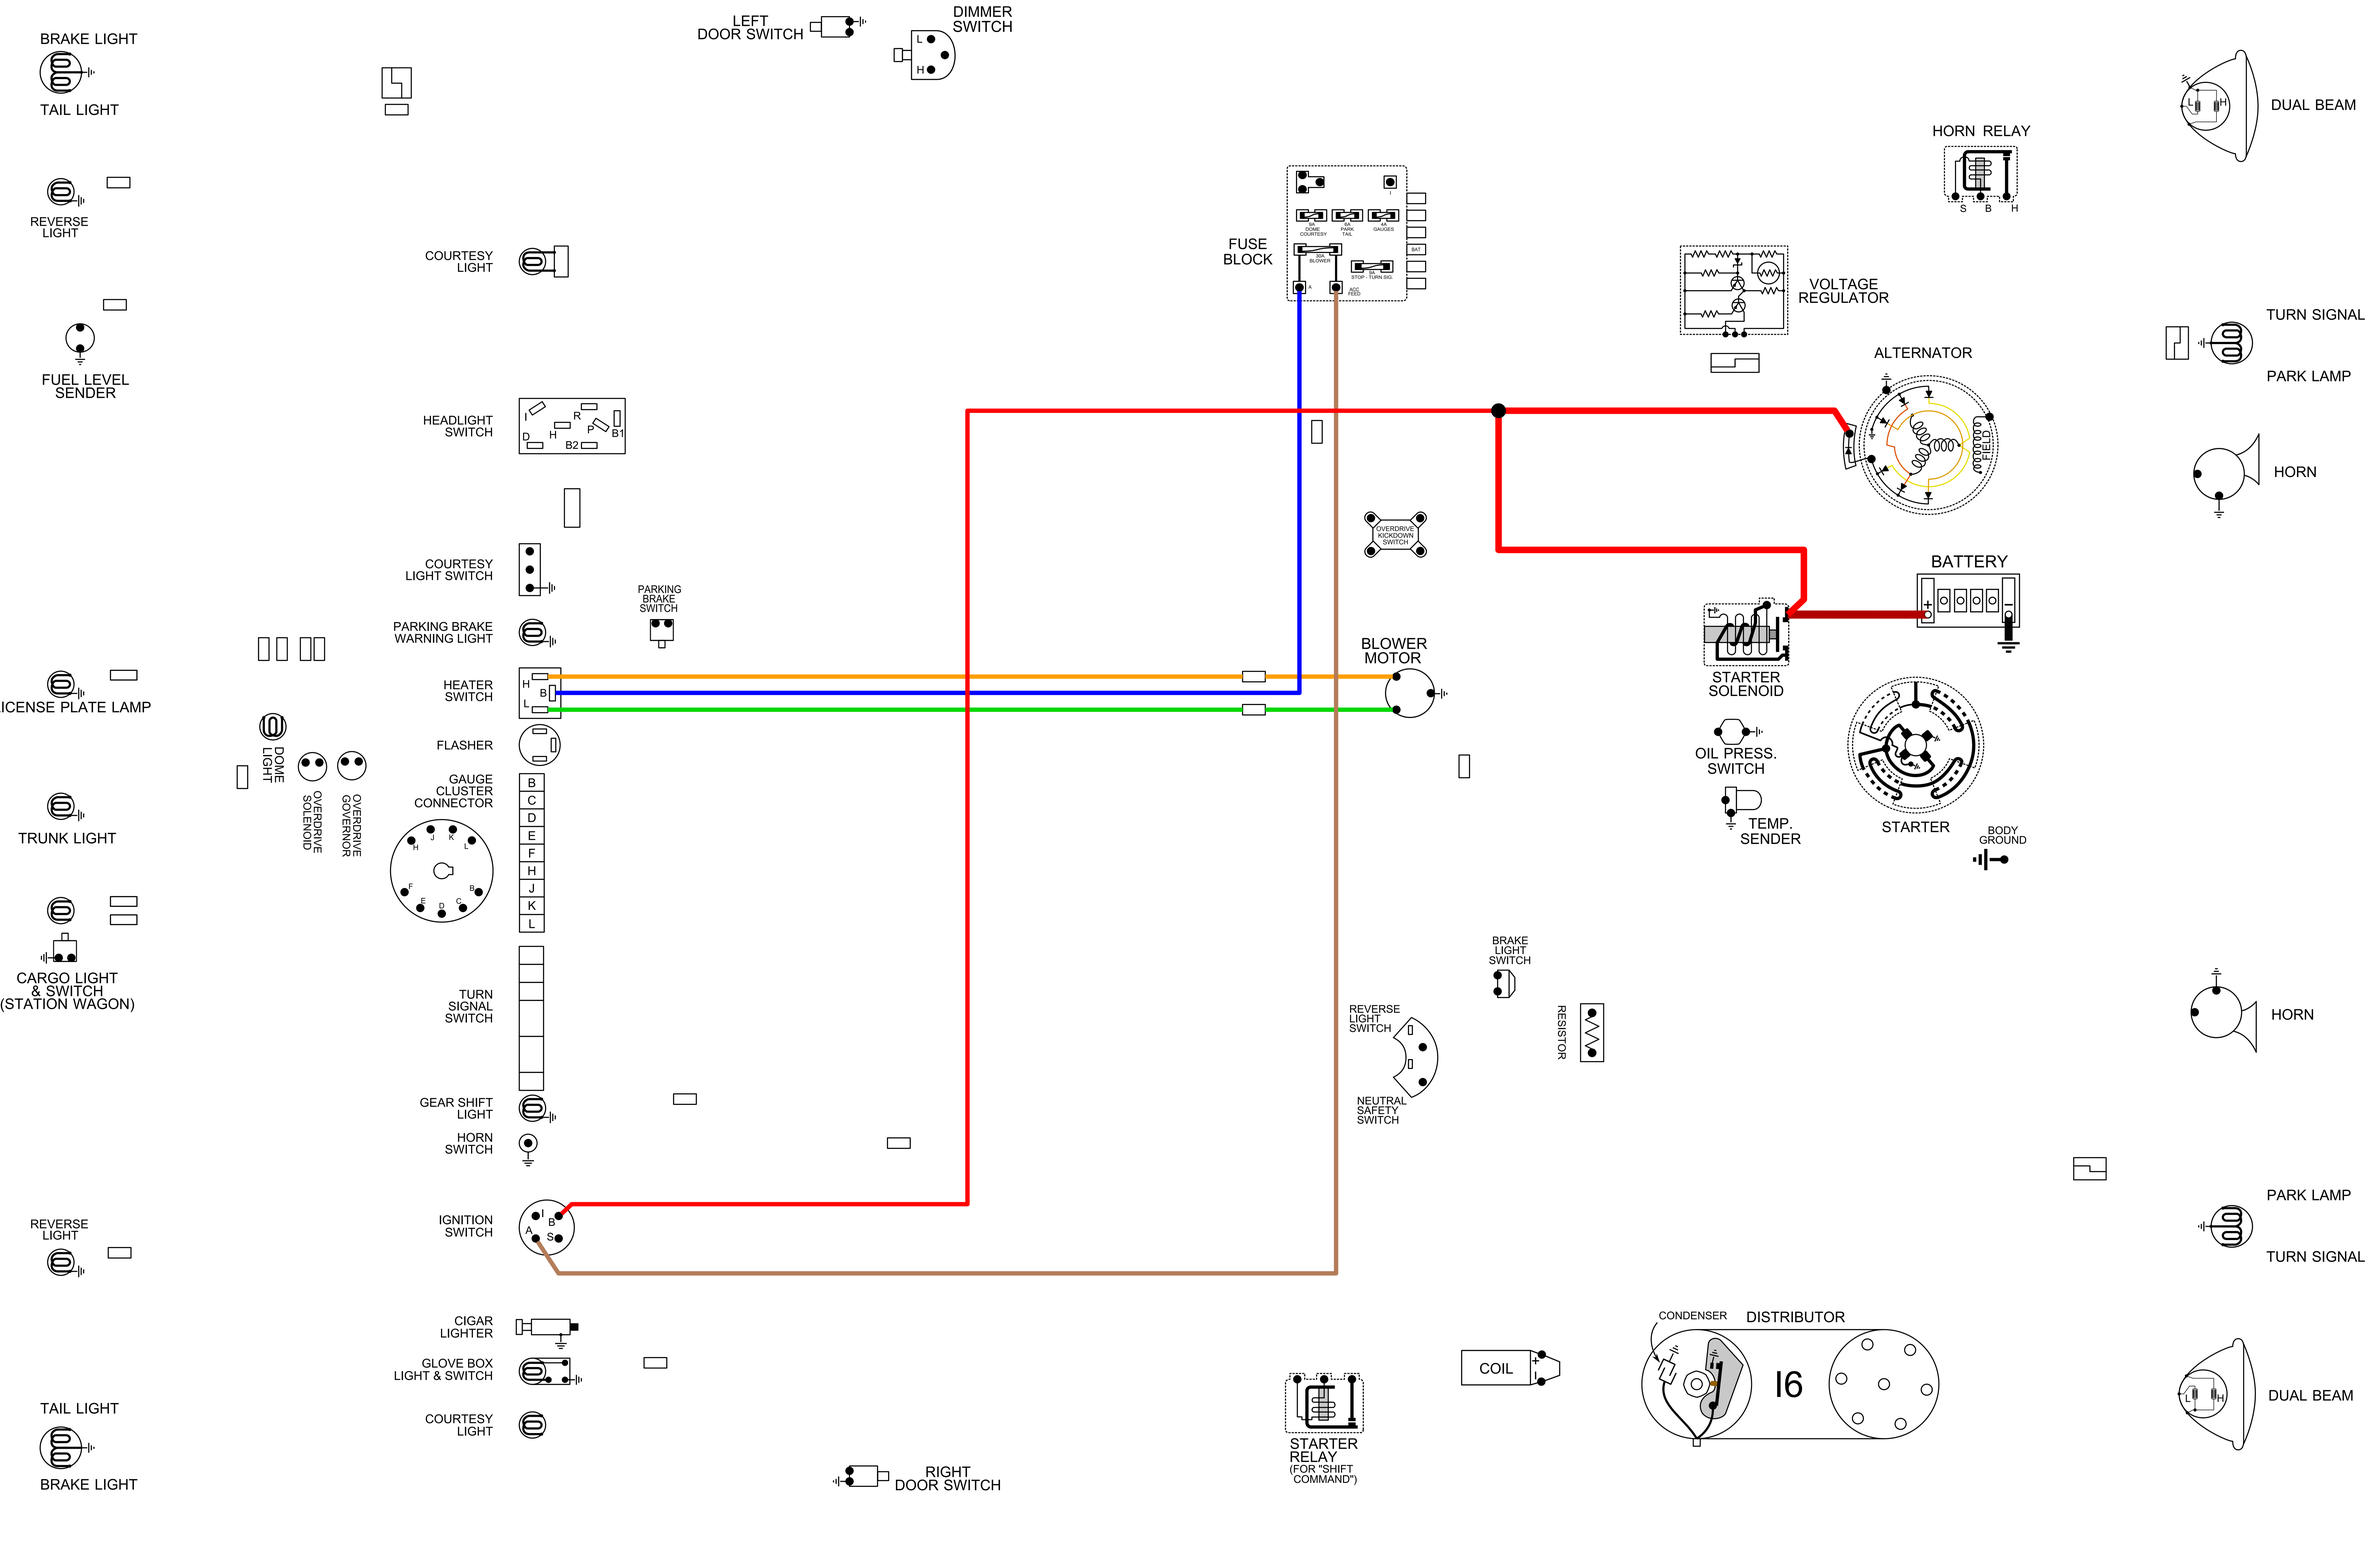

CINCO


1965 RAMBLER AMERICAN 6

HORN

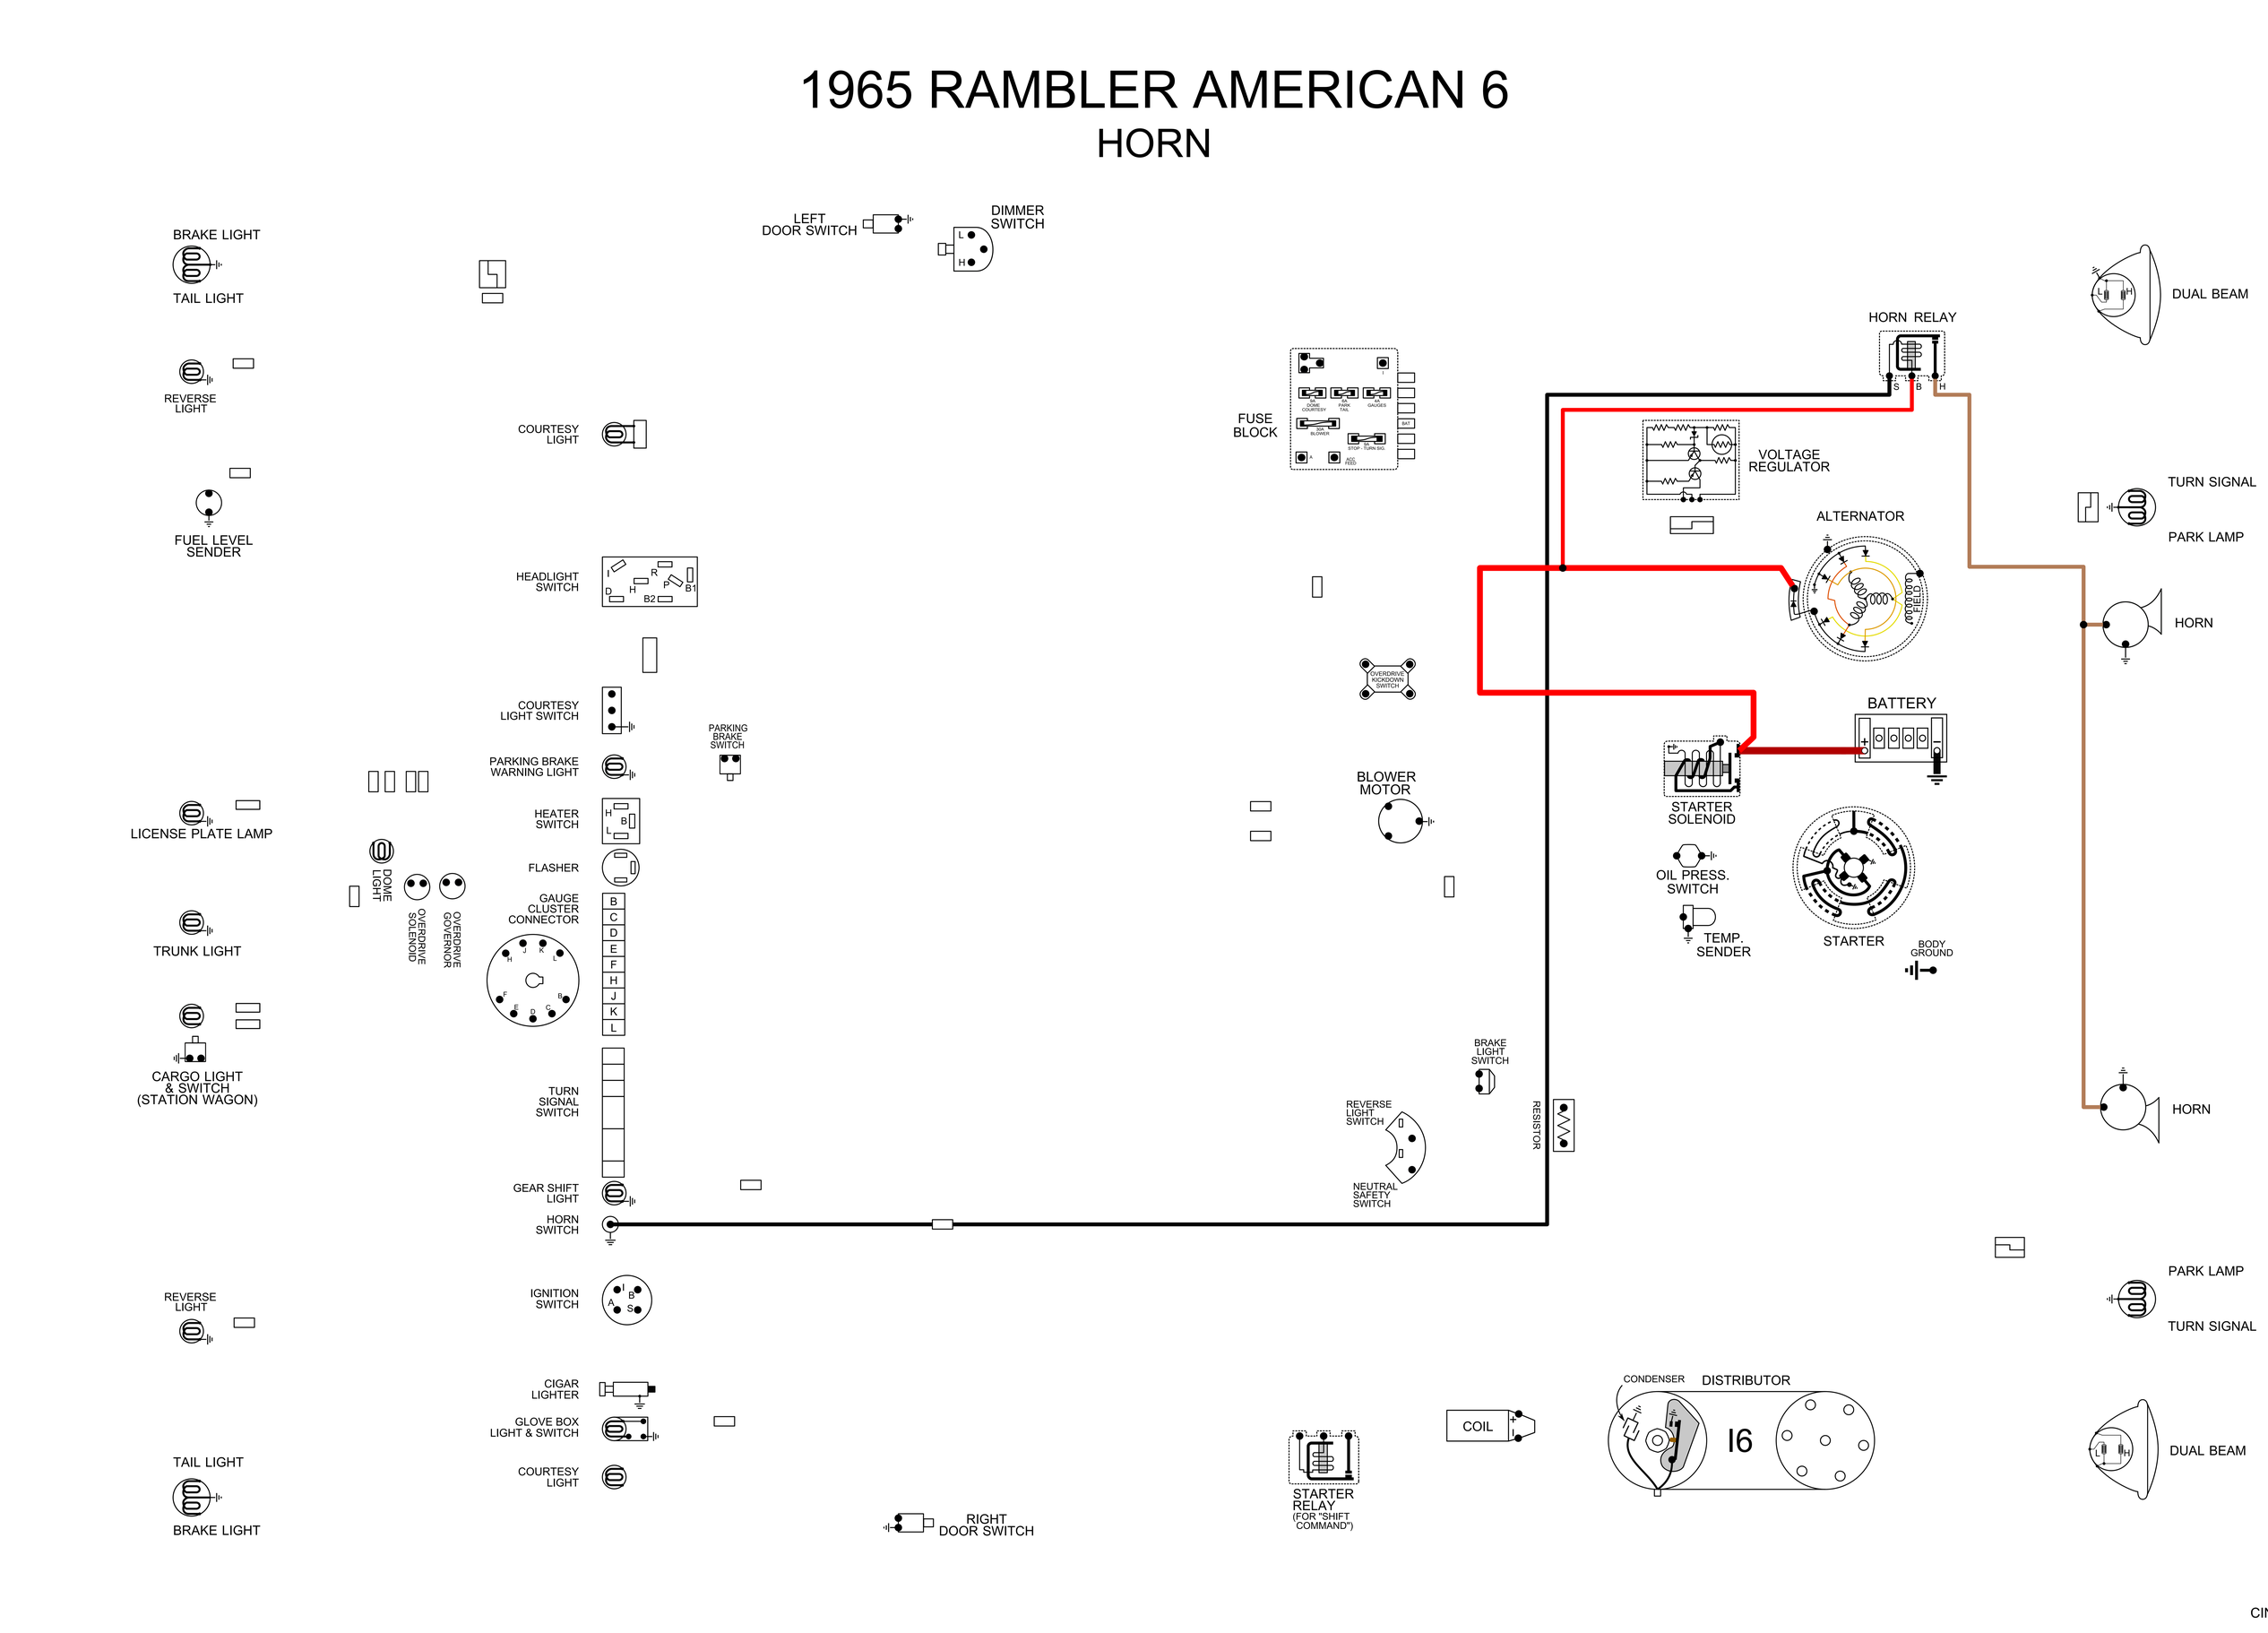

CINCO


1965 RAMBLER AMERICAN 6
TRANSMISSION

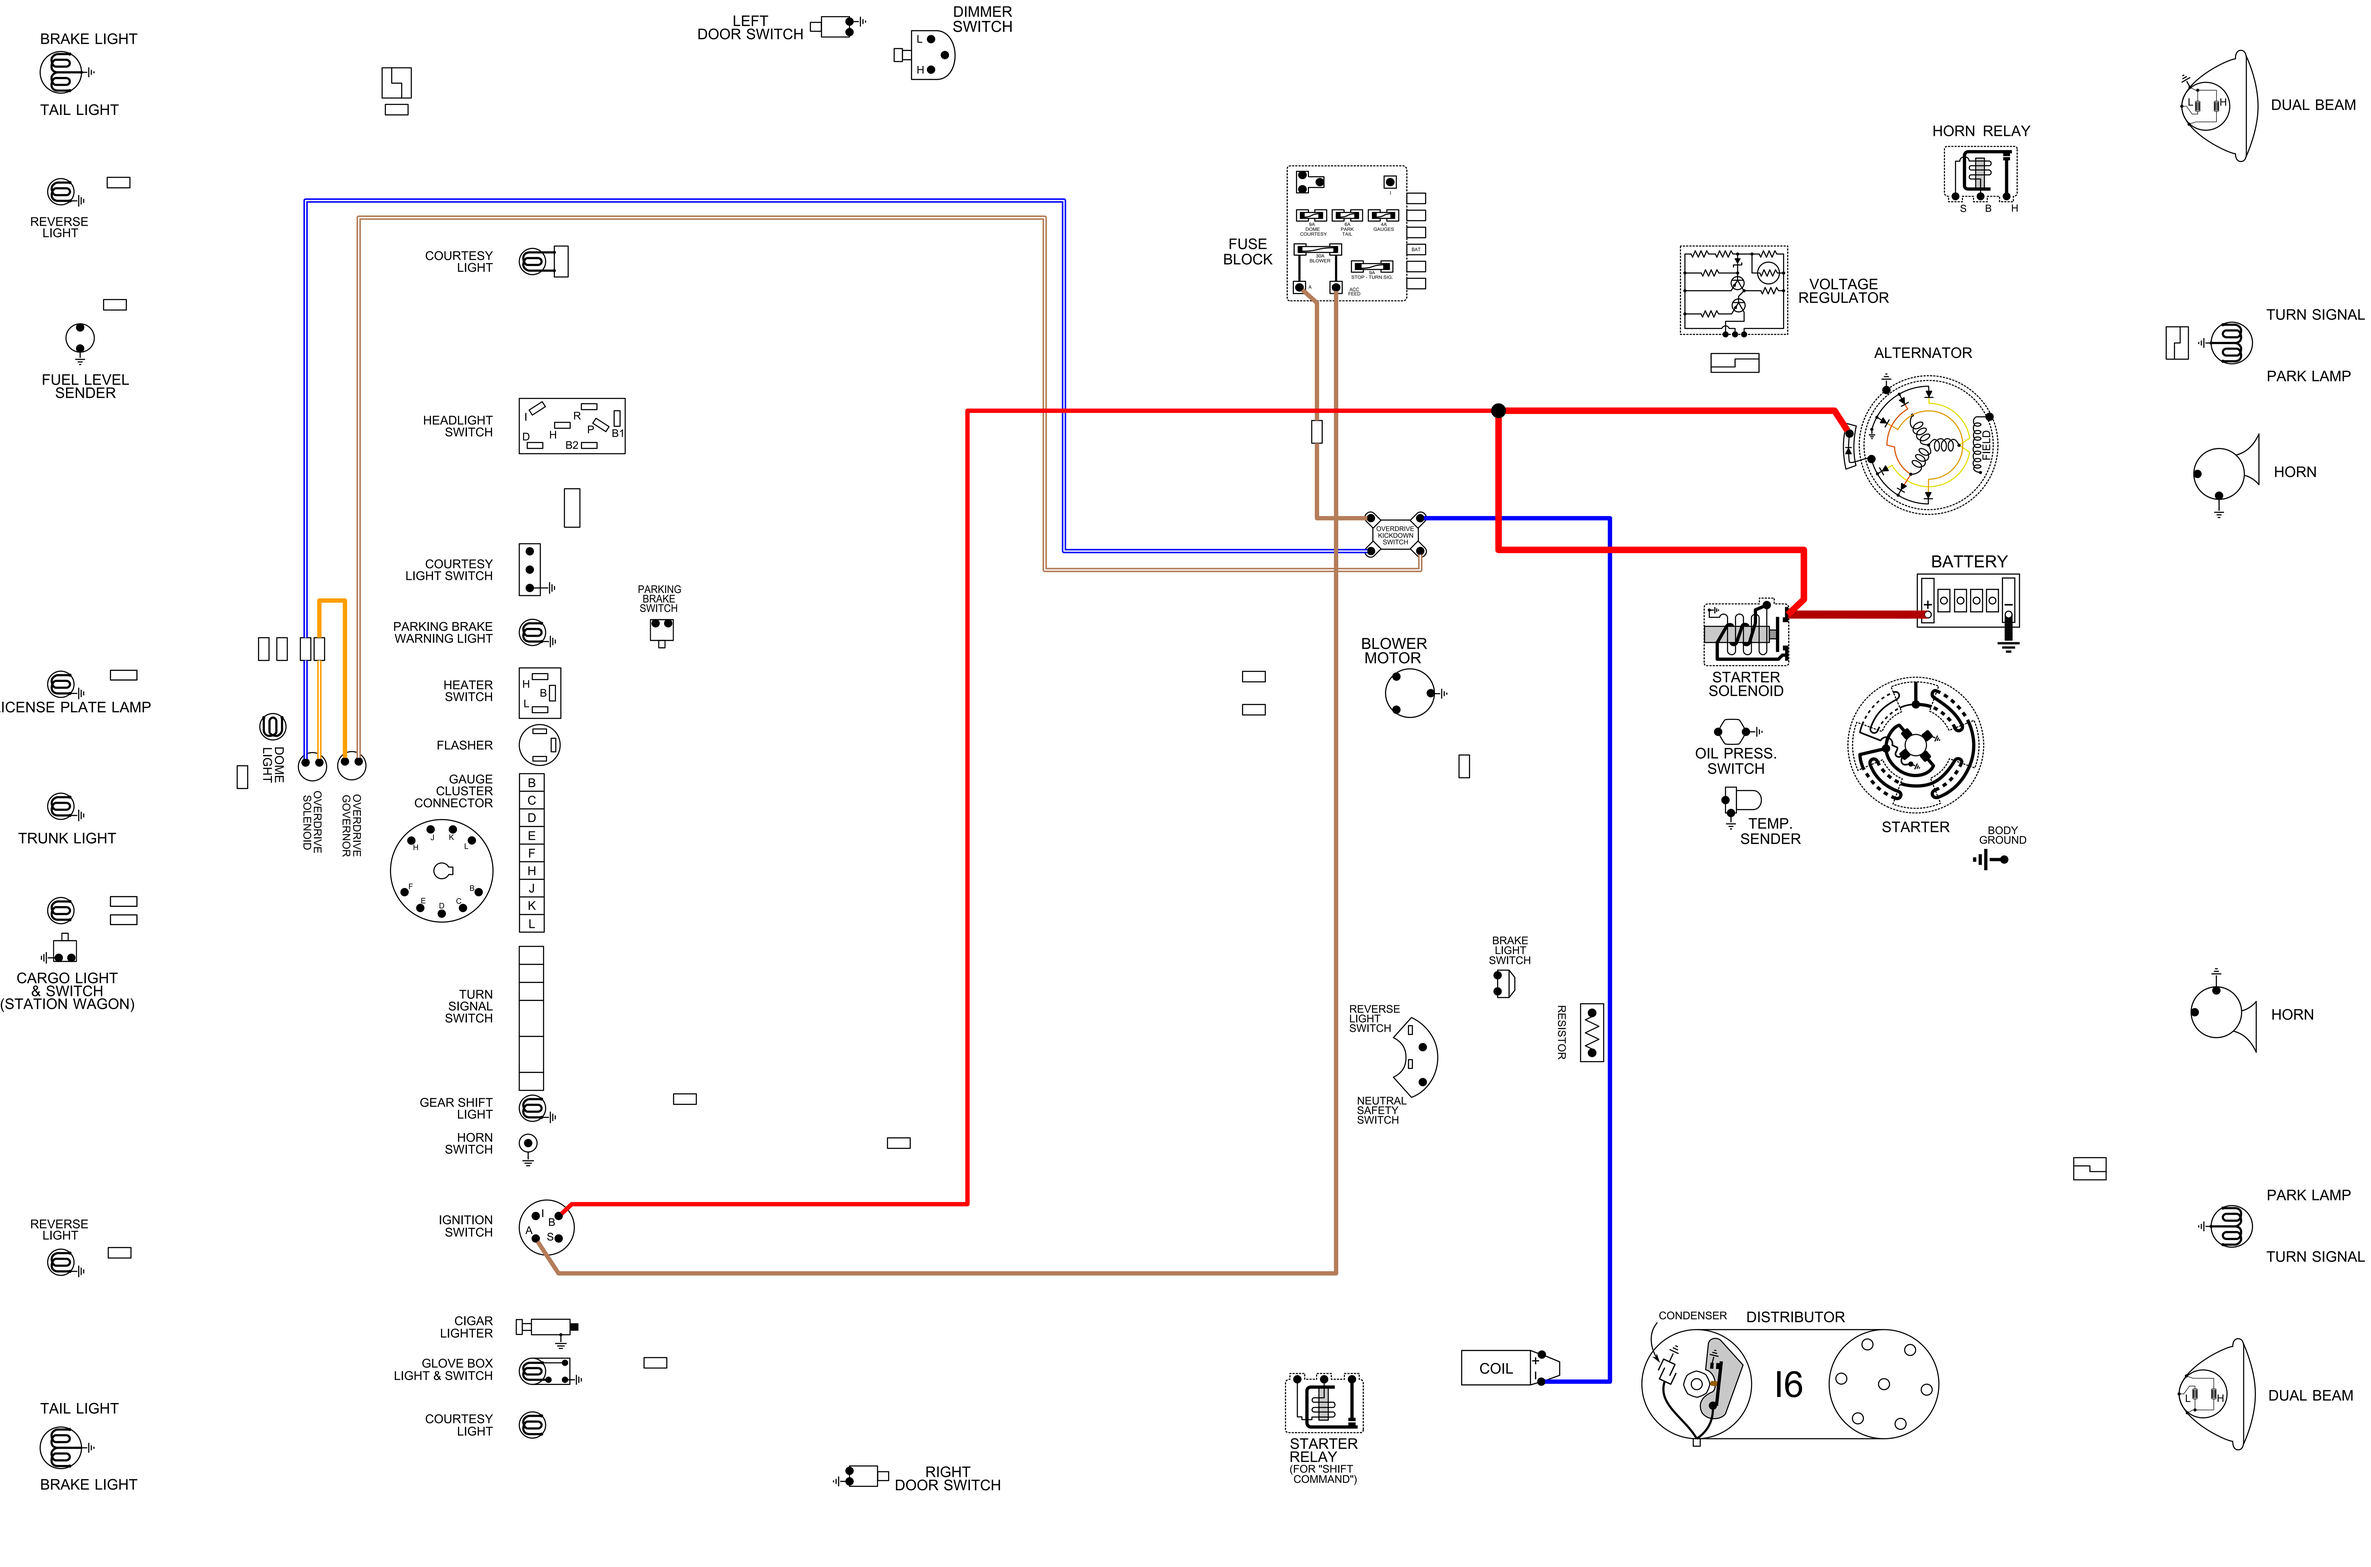

CINCO

1965 RAMBLER AMERICAN 6


GAUGES & WARNING LIGHTS

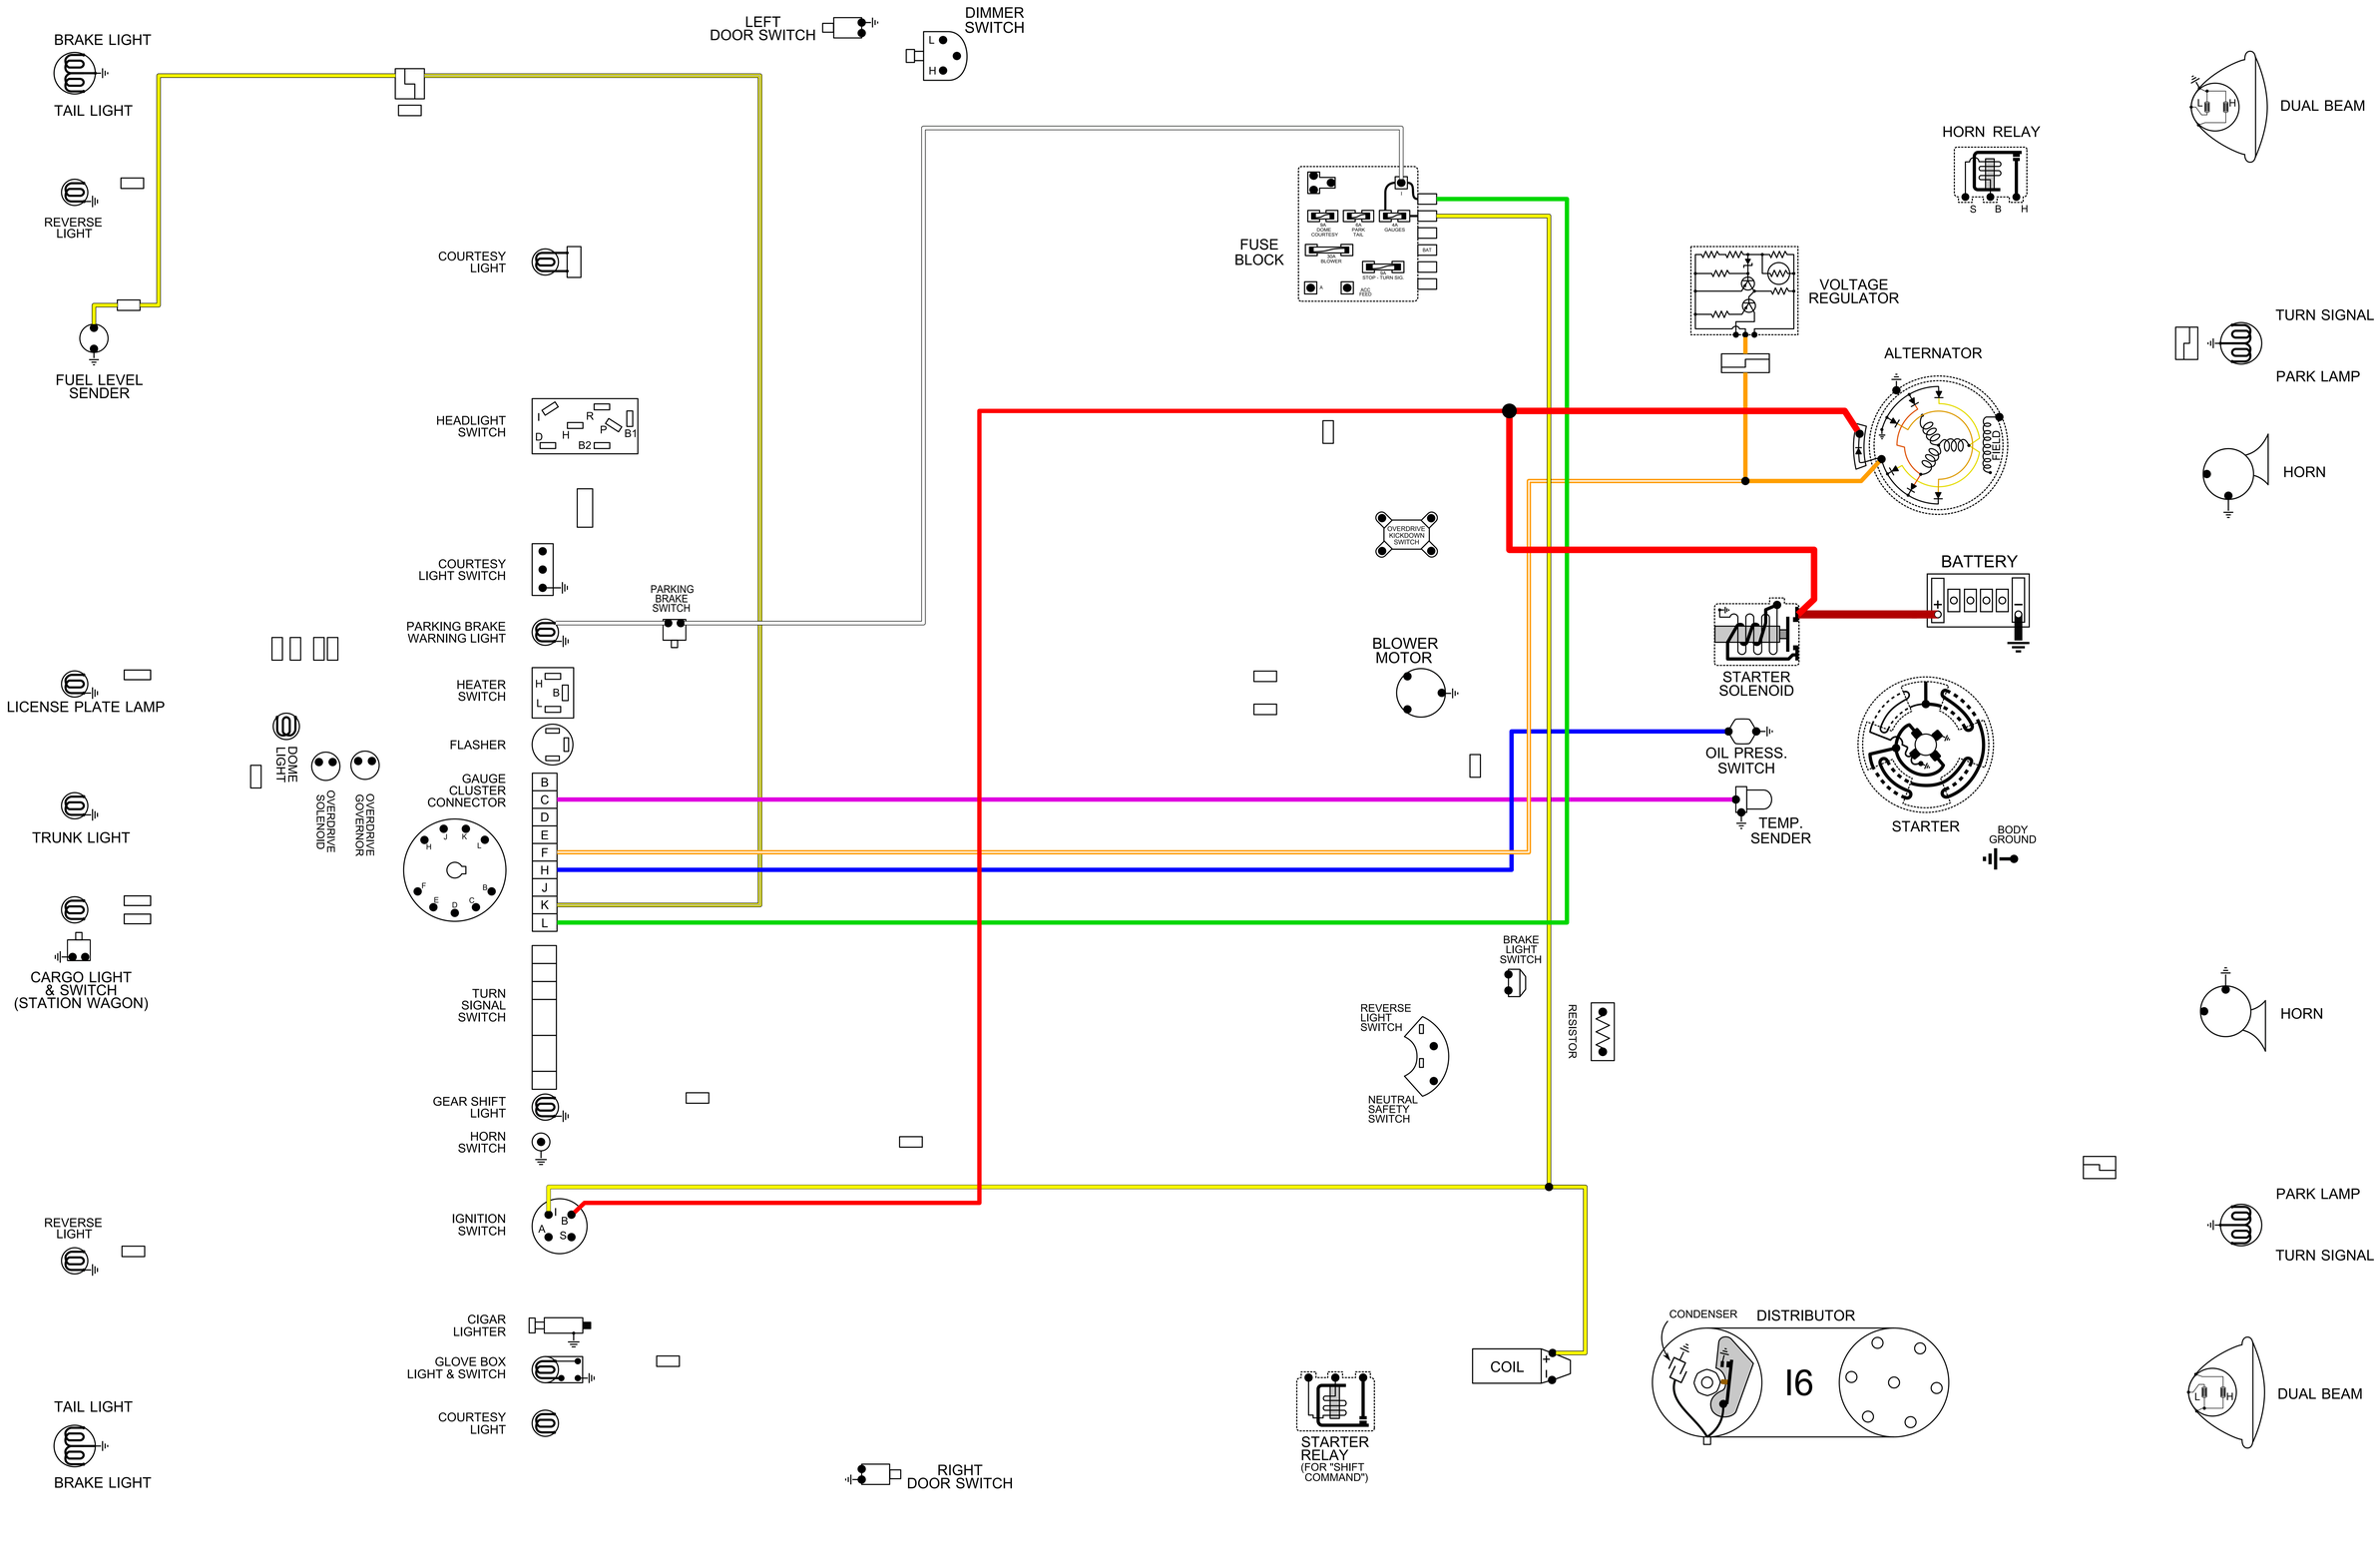

CINCO

1965 RAMBLER AMERICAN 6


REVERSE LIGHTS

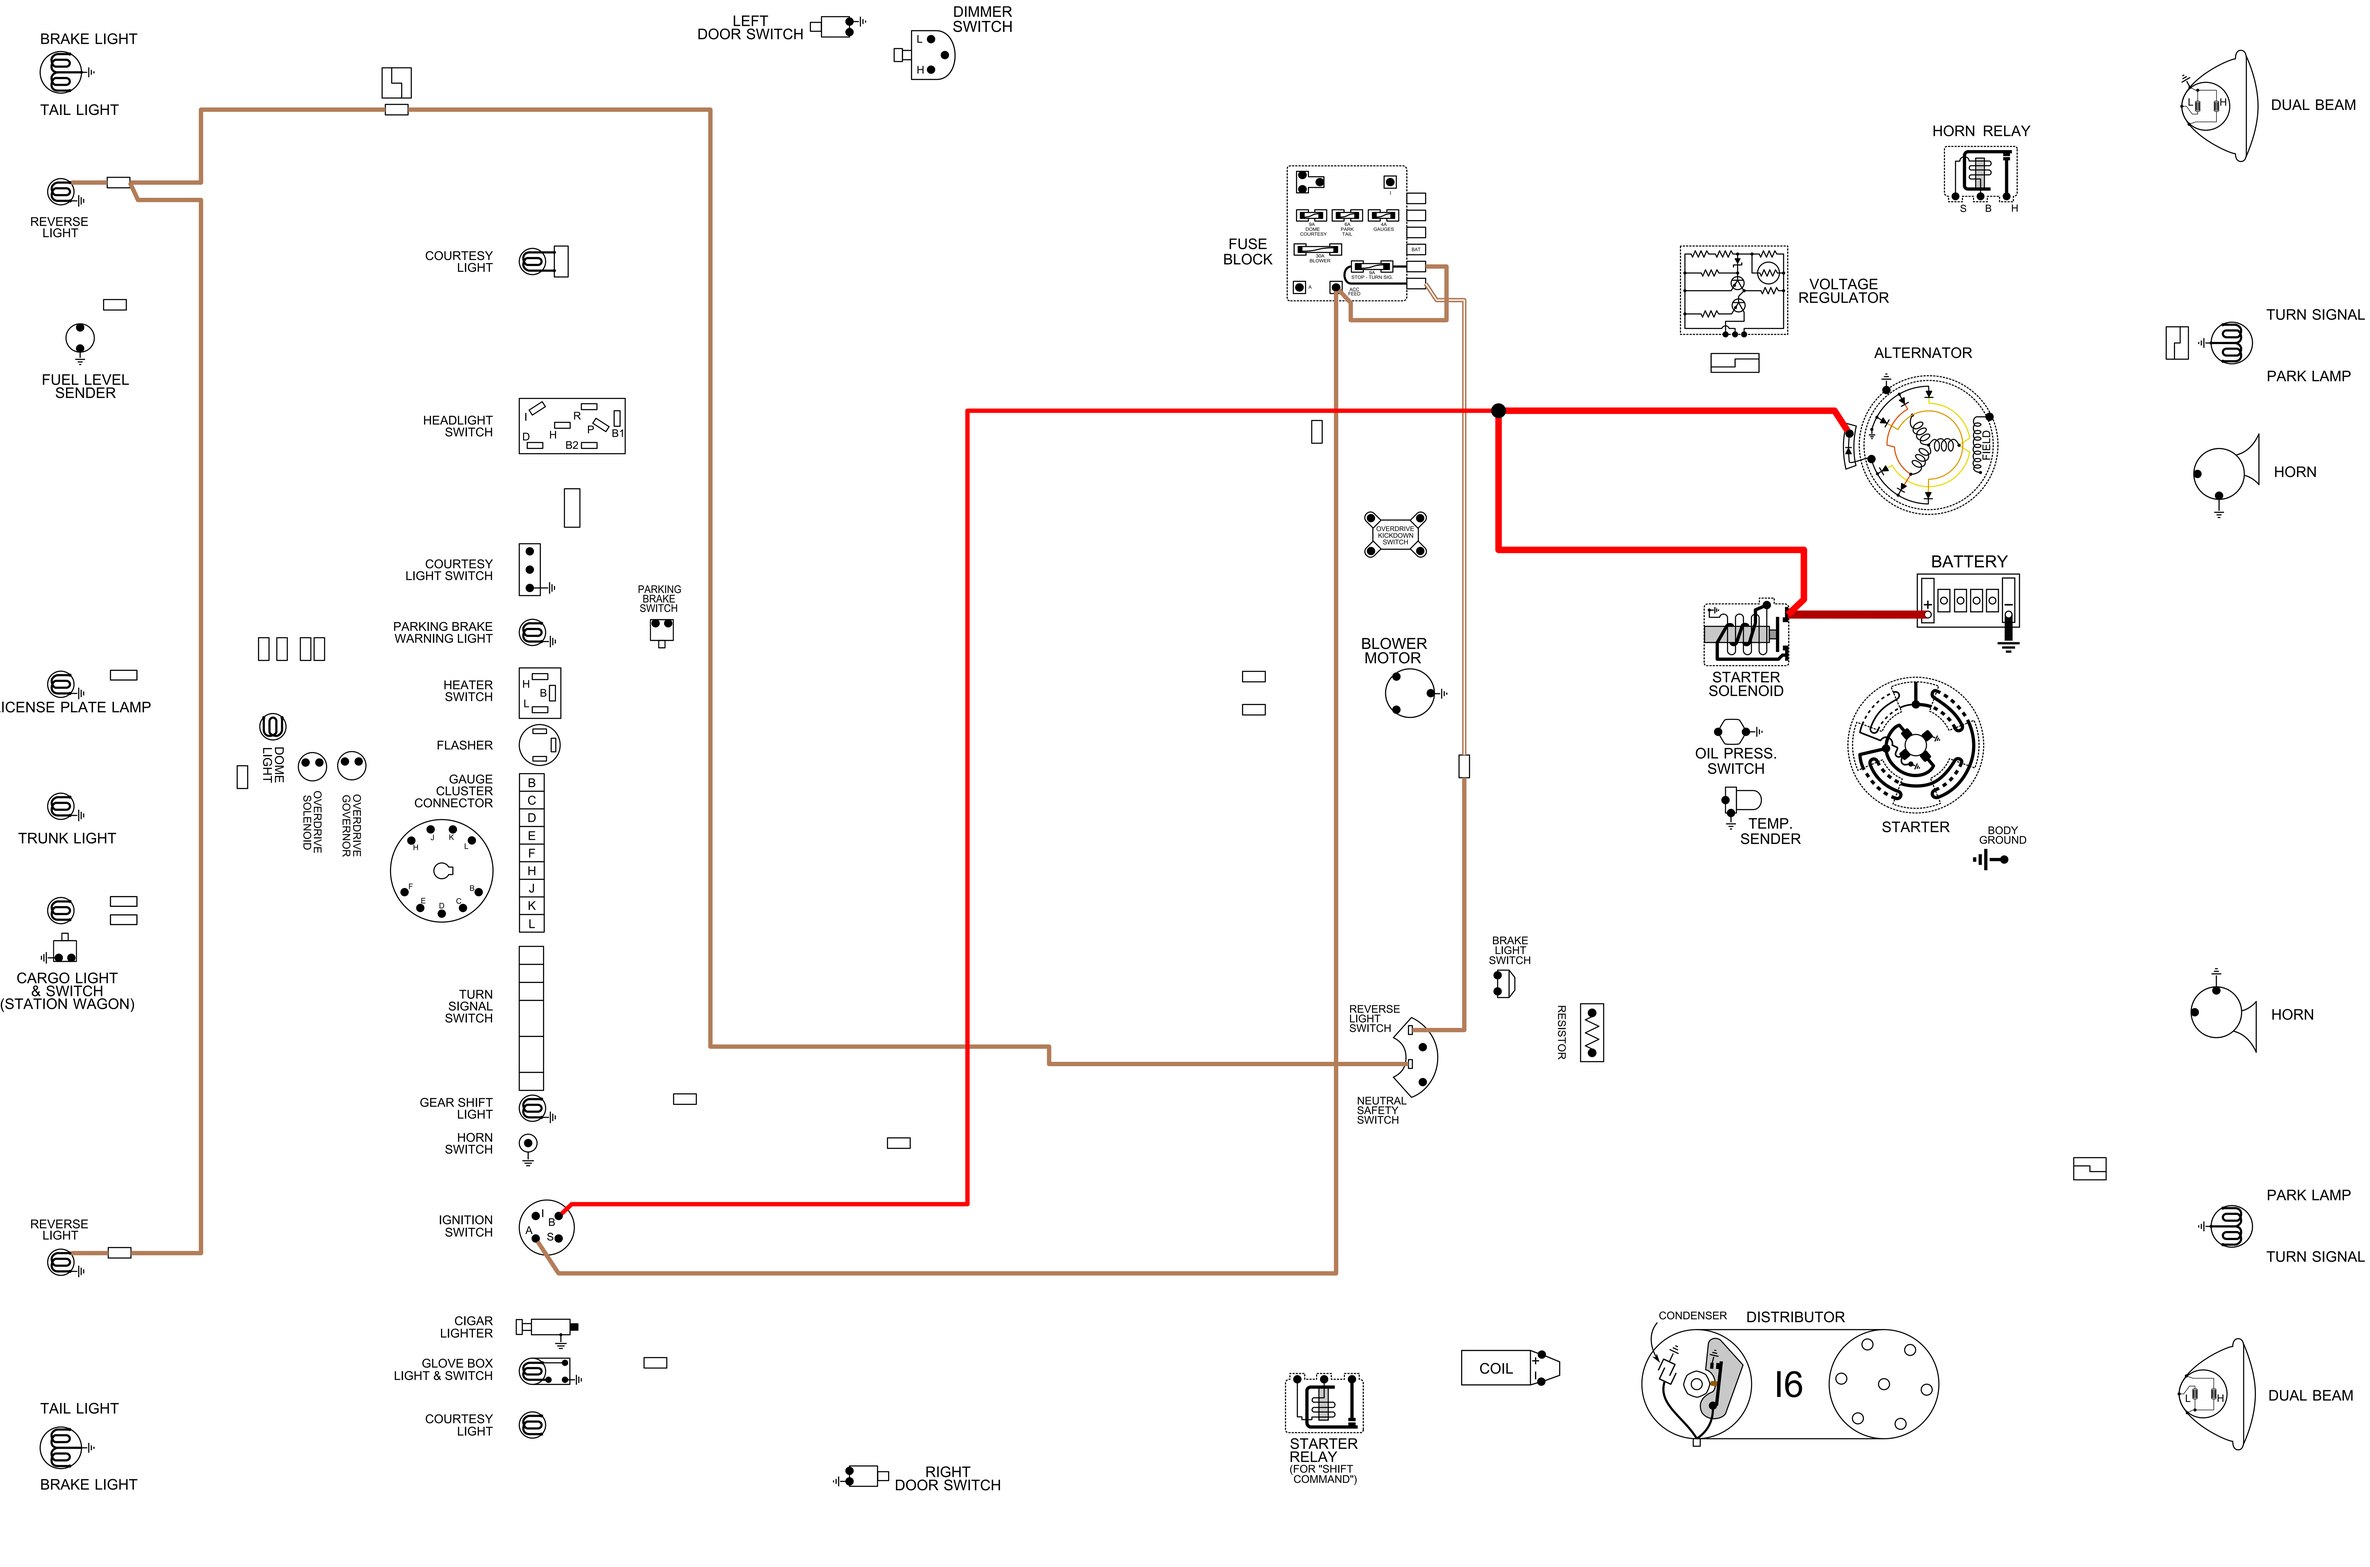

CINCO


1965 RAMBLER AMERICAN 6

DOME & COURTESY LIGHTS

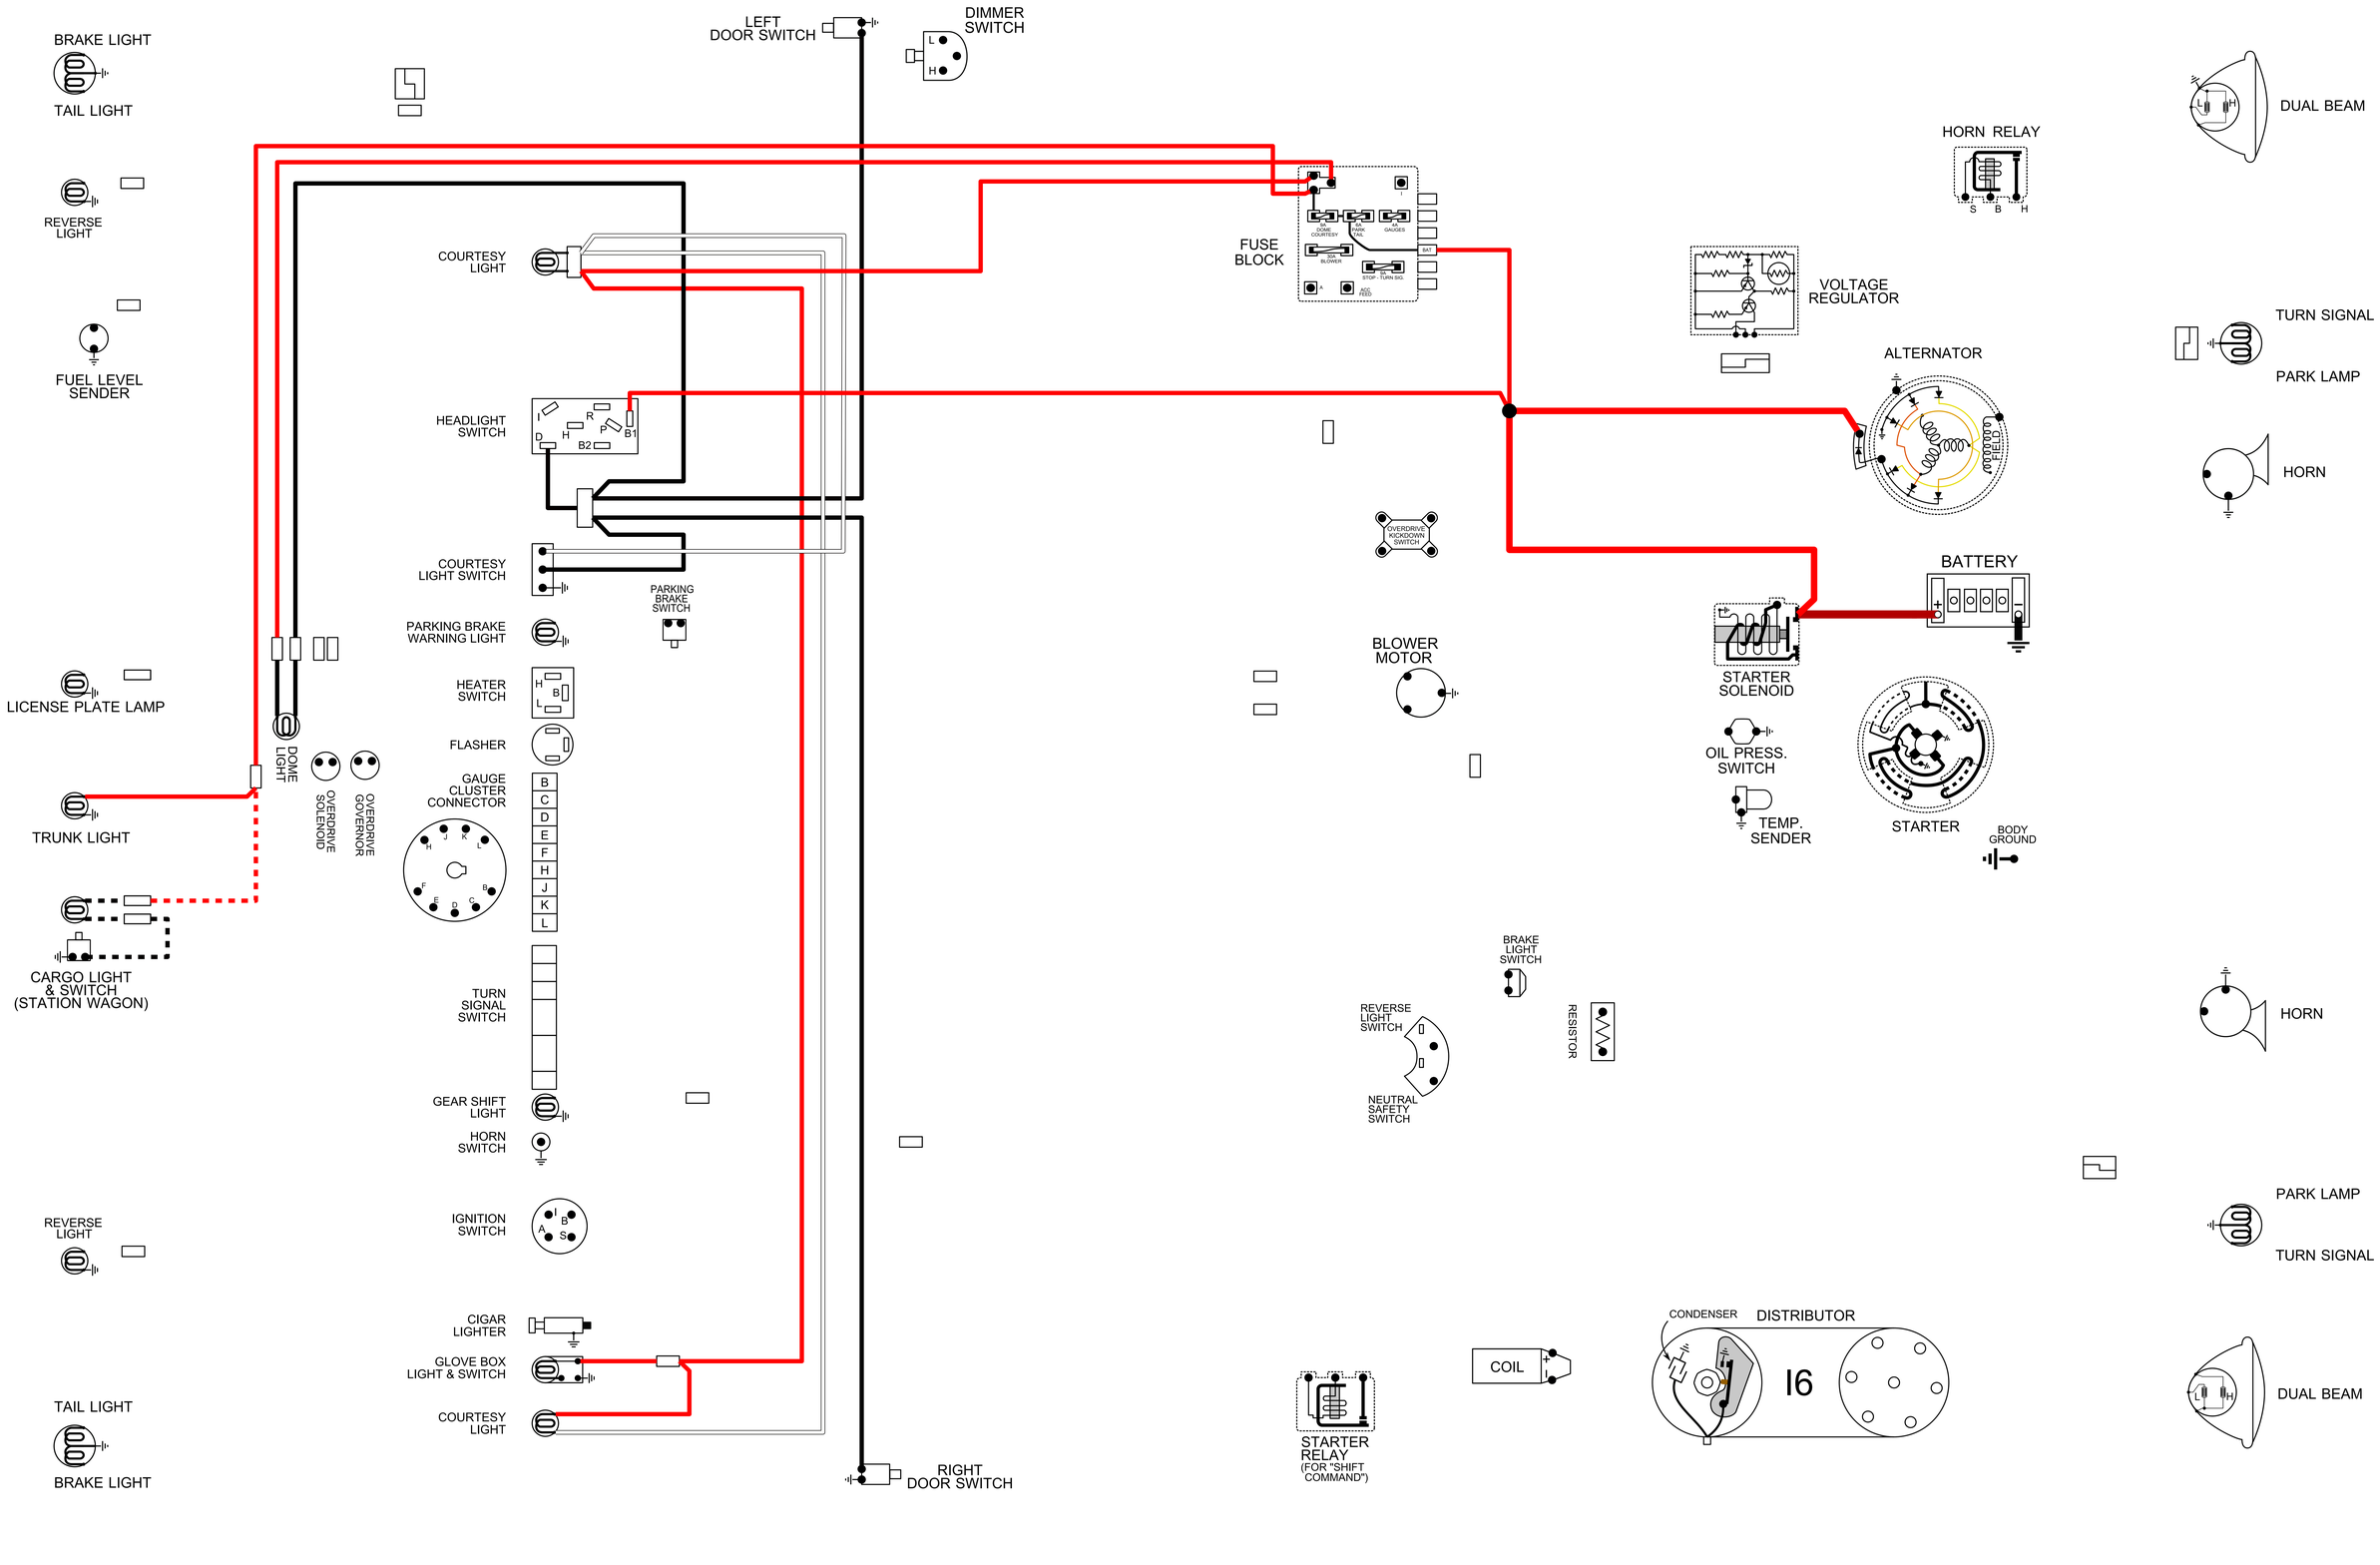

CINCO

1965 RAMBLER AMERICAN 6

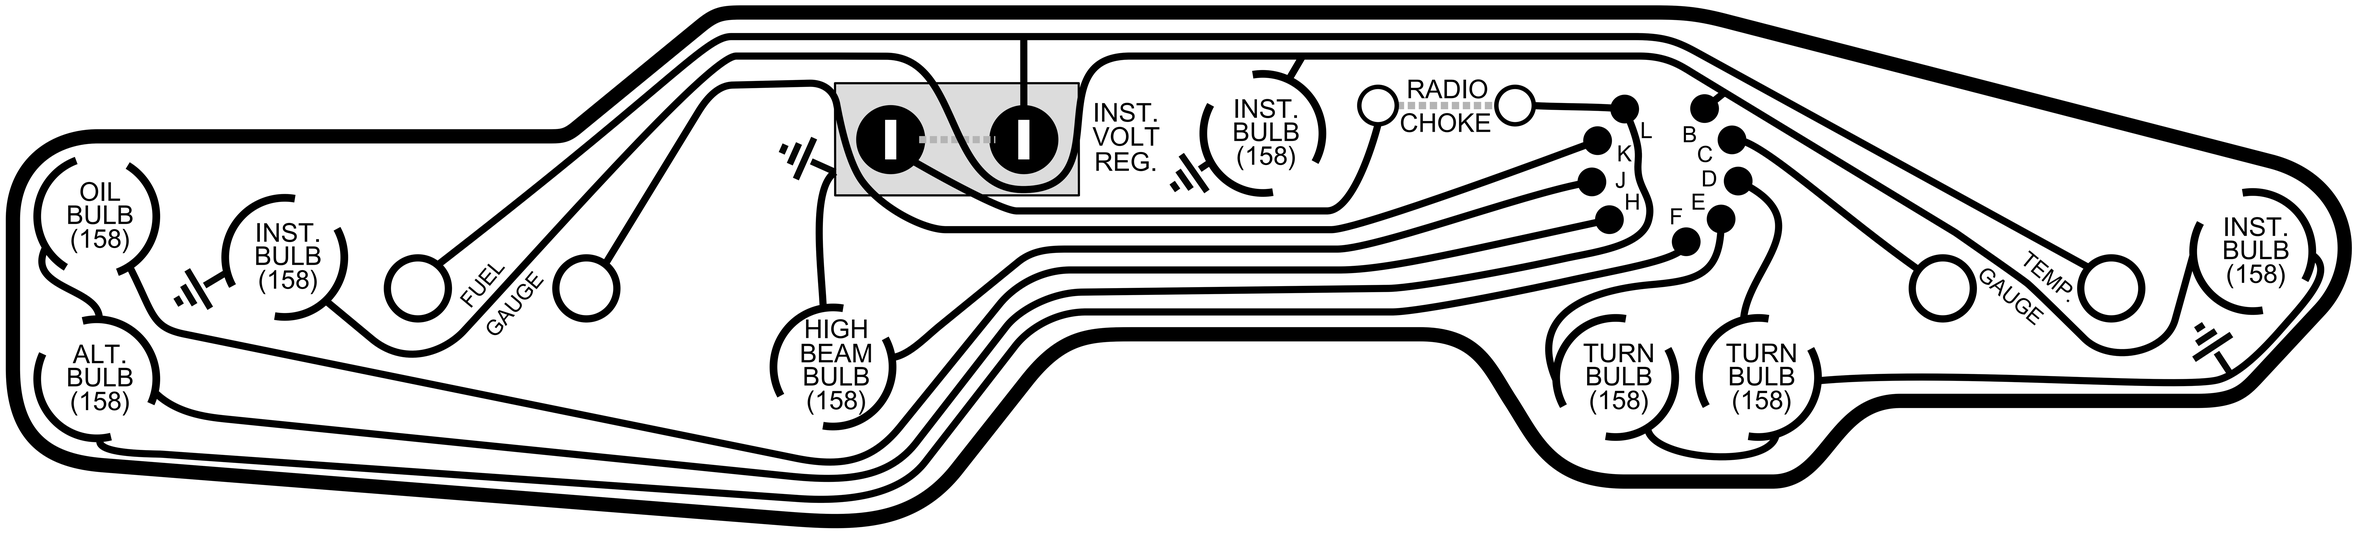

GAUGE CLUSTER

(VIEW FROM REAR)

B	TO HEADLIGHT SWITCH
C	TO TEMP. SENDER
D	TO TURN SIG. SWITCH
E	TO TURN SIG. SWITCH
F	TO GEN. VOLTAGE REG.
H	TO OIL PRESS. SWITCH
J	TO DIMMER SWITCH
K	TO FUEL SENDER
L	TO FUSEBOX

NOTE:

I WAS UNABLE TO FIND A PHOTO OF A BARE PCB. THE FLOW OF ELECTRICITY SHOULD BE GOOD, BUT SPECIFICS LIKE VOLTAGE REGULATOR POLARITY MAY BE REVERSED AND TRACE PATHS MAY BE SLIGHTLY OFF.

CINCO